D-33K

SERVICE MANUAL

UK Model

- D-33K is composed of D-33 and SRS-58.
- Refer to each service manual for information not contained in this service manual.

PARTS LIST

Part No.	Description	Remarks
3-755-305-21	MANUAL, INSTRUCTION (English)	
3-755-306-11	MANUAL, INSTRUCTION (English, French, Germany, Spanish, Italian, Portuguese, Dutch, Swedish)	
* 4-952-903-01	CUSHION, MAIN	
* 4-952-904-01	CUSHION (LOWER)	
* 4-952-910-01	INDIVIDUAL CARTON	

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

COMPACT DISC COMPACT PLAYER AND STEREO ACTIVE SPEAKER SYSTEM

SONY®

English
92E1822-1
Printed in Japan
©1992.5
Published by Customer Relations and Service Group

Sony Corporation
General Audio Group

9-957-282-11

D-33

SERVICE MANUAL

US Model
Canadian Model
AEP Model
E Model
Australian Model

MEGA BASS
Discman

Model Name Using Similar Mechanism	D-11
CD Mechanism Name	KSM-220ABN

SPECIFICATIONS

CD section

System: Compact disc digital audio system
Laser diode properties: Material: GaAlAs
Wavelength: λ = 780 nm
Emission duration: Continuous Laser output: Less than 44.6μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.)
Error correction: Sony Super Strategy Cross Interleave Read Solomon Code D-A conversion 16-bit linear 8fs digital filter
Frequency response: 20–20,000 Hz $\pm^{\frac{1}{2}}_{3}$ dB
(measured by EIAJ CP-307)
Output (at 9V input level): Line output (stereo minijack)
Output level 1 V rms at 47 kilohms
Load impedance over 10 kilohms
Headphones (stereo minijack)
5mW + 5mW at 16Ω

General

Power requirements: Supplied:
• DC IN 9 V jack accepts the Sony AC power adaptor for use one:
120V AC, 60Hz (US, Canadian Model)
220V AC, 50Hz (AEP Model)
100-240V, 50/60Hz (E, Australian Model)
Optional:
• DC IN 9V accepts the Sony CPM-203P mount plate and CPM-200A plate arm for use on 12V car battery.
• DC 6V, four LR6 (size AA) alkaline-batteries
Power consumption: 1.2W DC
Dimensions: Approx. 137 × 35 × 155.3 mm (5½ × 1⁷⁄₁₆ × 6⅛) (w/h/d) incl. projecting parts and controls
Weight: Approx. 410 g (14.5 oz.) net
Approx. 505 g (18 oz.) incl. batteries
Supplied accessories: AC power adaptor (1)
Connecting cord
(phono plug × 2↔stereo miniplug × 1) (1)
Stereo headphones (1)

Design and specifications subject to change without notice.

CAUTION
The use of optical instruments with this product will increase eye hazard.

For the AEP MODEL

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

Note on the AC power adaptor
Use only the AC power adaptor supplied or AC-E6M/AC-E90M AC power adaptor (not supplied). Do not use any other AC power adaptor.
The AC power adaptor supplied with other DISCMAN models with DC IN 9V or DC IN 6V jack and AC-D6M, etc. cannot be used with this unit.


Polarity of the plug
(Unified polarity type)

MICROFILM

COMPACT DISC COMPACT PLAYER

SONY®

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

ADVARSEL !
Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Lever det brugte batteri tilbage til leverandœren.

ADVARSEL

Lithiumbatteri – Eksplosjonsfare.
Ved utskifting benyttes kun batteri som
anbefalt av apparatfabrikanten.
Brukt batteri returneres apparatleverandœren.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent
typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens
instruktion.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

TABLE OF CONTENTS

Section	Title	Page
	Specifications	1
1.	**SERVICING NOTES**	3
2.	**GENERAL**	7
3.	**ELECTRICAL ADJUSTMENTS**	9
4.	**DIAGRAMS**	
4-1.	Semiconductor Lead Layouts	14
4-2.	Block Diagrams	15
4-3.	Printed Wiring Board	18
4-4.	Schematic Diagram	21
4-5.	IC Block Diagrams	24
5.	**EXPLODED VIEWS**	
5-1.	Cabinet Section	26
5-2.	Chassis Section	27
5-3.	Mechanism Section	28
6.	**ELECTRICAL PARTS LIST**	29
	HARDWARE LIST	34

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1
SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270℃ during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

CAUTION

1. To prevent damages to the S801 (OPEN SW)
   If the P plate is installed when the CD cover is closed, the S801 lever is positioned behind the open/close arm section of the cover. Thus, when the cover is opened, the S801 will be damaged.

- To prevent damages to the S801 (OPEN SW), do not install the P plate when the CD cover is closed. Install the P plate when the CD cover is opened. In addition, check the position of the S801 lever when installing the P plate.

2. Special mode for normal operation check
   The S801 (OPEN SW) of the D-33 is found near the contact joint of the cover. Since it is difficult to turn the power ON without the cover with the test tool, conduct the following step to enable normal operation without the cover.

- Press the PLAY and STOP button simultaneously while turning the DC power supply ON.

Before Replacing the Optical Block

Please be sure to check thoroughly the parameters as for the "Optical Block Checking Procedures" (Part No. : 9-960-027-11) issued separately before replacing the optical block. Note and specifications required to check are given below.

- FOK output : IC501 ⑨ pin
  When checking FOK, remove the lead wire to disc motor and unsolder and open IC801 ㉒ pin (FOK).
- S carve P-to-P value : 3Vp-p
  When checking S carve P-to-P value, remove the lead wire to disc motor.
- Adjusted part for focus gain adjustment : RV501
- RF signal P-to-P value : 0.7 – 1.25Vp-p
- Traverse signal P-to-P value : 1.5Vp-p
- The repairing grating holder is impossible.
- Adjusted part for tracking gain adjustment : RV502

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe more than 25cm away from the objective lens.

Laser Diode Check Procedure

The laser diode on this set will not emit unless the top panel is closed and S801 (leaf SW type) is turned on. The laser diode will always emit even if focus search is not performed in service mode.

The laser diode is checked using the current value which flows to the laser diode inside the optical pick-up block.

Procedure 1 (service mode or normal operation)

Check the laser diode emission with the eye.

1. Open upper panel.
2. S801 on as Fig. 1.
   (In service mode, this operation is not necessary.)
3. Press the ▶|| key.
   (In service mode, this operation is not necessary.)
4. Observe the objective lens and confirm that the laser diode is emitting light. At this time, the laser diode goes on about 10 seconds due to focus serarch. If it does not, APC circuit or optical pick-up block is defective.

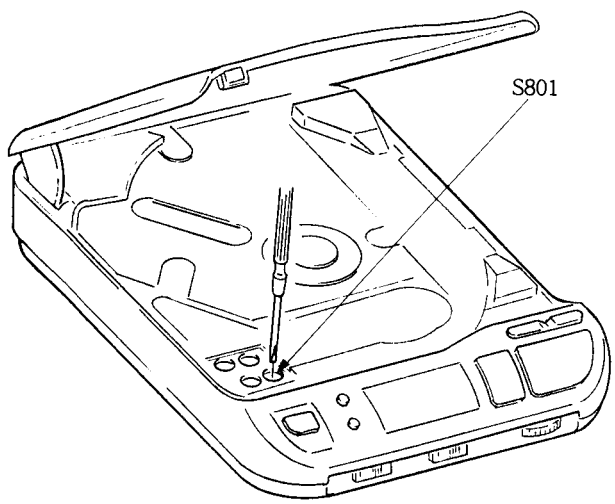

Fig.1 Turning S801 on

Procedure 2 (service mode or normal operation)

Check by the current with flows in the laser diode.

1. Close the top panel.
2. Remove the main board and read the current value on the label affixed to the optical pick-up block.
   (Label on optical pick-up block)

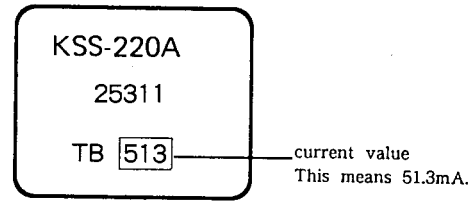

   The current value varies with the set.
3. Connect a VOM as shown in Fig. 2.
4. Press the ▶|| key.
5. Calculate the current by the VOM reading.
   VOM reading (V) ÷10=current (A)
   ex. VOM reading=0.56V
   0.56÷10=0.056 (A) =56 (mA)
6. Confirm that the ammeter reading is within the range given below.
   value on label $^{+5}_{-11}$ mA (25℃)
   variation relative to temperature : 0.4mA/℃
   (Current increases when temperature rises and decreases when it drops.)

If the value is more than the range give, APC circuit has been defective or the laser diode has deteriorated. If it is less, APC circuit or optical pick-up block is defective.

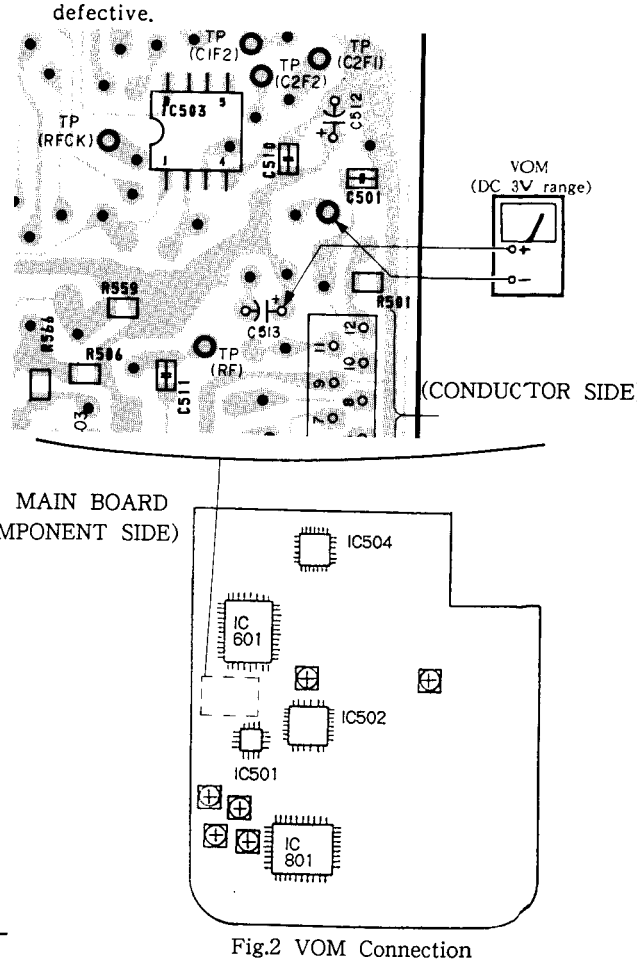

Fig.2 VOM Connection

SERVICE MODE (service program)

This set has built-in service program in the microcomputer as usual sets.

The operation method of service program is explained below.

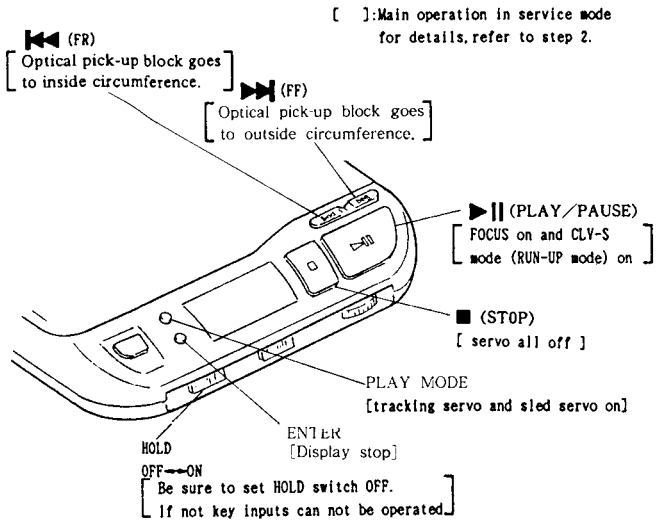
[ ]:Main operation in service mode
for details, refer to step 2.
⏮ (FR)
Optical pick-up block goes to inside circumference.
⏭ (FF)
Optical pick-up block goes to outside circumference.
▶II (PLAY/PAUSE)
FOCUS on and CLV-S mode (RUN-UP mode) on
■ (STOP)
[servo all off]
PLAY MODE
[tracking servo and sled servo on]
ENTER
[Display stop]
HOLD
OFF⟷ON
Be sure to set HOLD switch OFF.
If not key inputs can not be operated.

Fig.3 Key Positions

• Step 1 (Service Mode setting method)

1. Turn the HOLD switch OFF with the external power supply not plugged in (no power applied to set) and press the ▶II key.
2. Solder jumper TEST terminal.
   (IC801 pin㉔(TEST) is grounded.)
3. Plug in external power supply.
   This puts the set into service mode.

• Step 2 (Service Mode operation)

1. When service mode is set, the display will change 6 times, and those 6 changes will be repeated over and over.
   With this the LCD display should be present in service mode. Even if LCD does not display, other operations will be performed.
2. When ⏭ or ⏮ key is pressed, the optical pick-up block moves to the inside or outside circumference. Tracking servo and sled servo go off when this is done, so press PLAY-MODE to turn on the tracking servo if necessary.
3. When ▶II key is pressed, CLV-S (pull-in mode) starts while performing focus search. When there is no disc installed, focus search is repeated several times while disc motor is rotating.
4. When PLAY-MODE is pressed, tracking servo, sled servo and CLV-A (servo during PLAY) go ON.
5. When 3 and 4 are performed, the disc begins to play. At this time, the top panel should be closed and S801 is to be ON. A sound is not produced as muting is ON.
6. All servo (focus, tracking, sled and spindle) go off when ■ key is pressed.

• Step 3 (Service Mode release)

1. First be sure to unplug the external power supply, then remove the solder jumper TEST terminal.
2. The set will now operated normally.

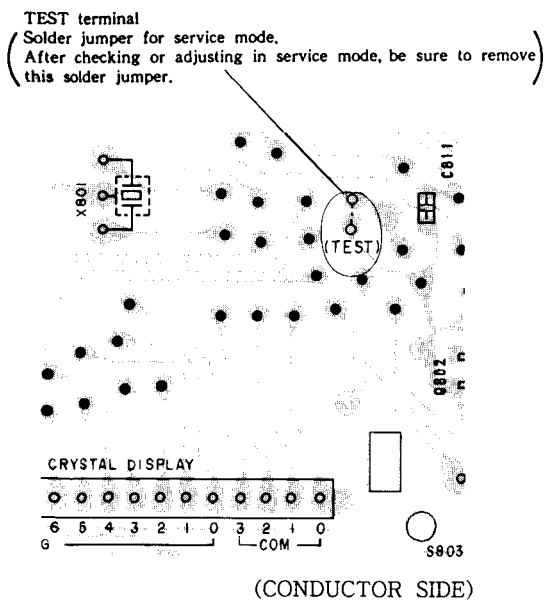

Fig.4 TEST terminal position

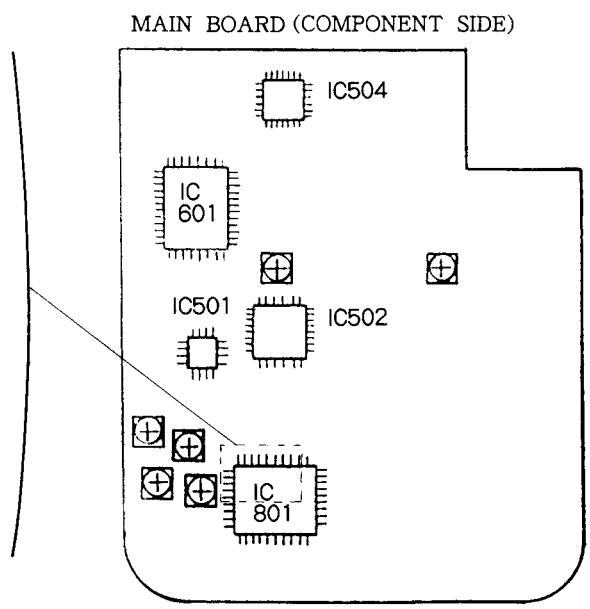

PACK ASSY INSTALLING PROCEDURE

The positioning adjustment is required when installing the rack assy.

Perform the adjustment using with rack assy positioning jig.

Description	Part No.
Rack Assy Positioning Jig	4-931-565-01

[Adjustment Procedure]

(1) Position the rack assy so that the distance A and B becomes equal by rotating the sled gear. (A=B=6 mm)
Loosen the rack assy mounting screws.

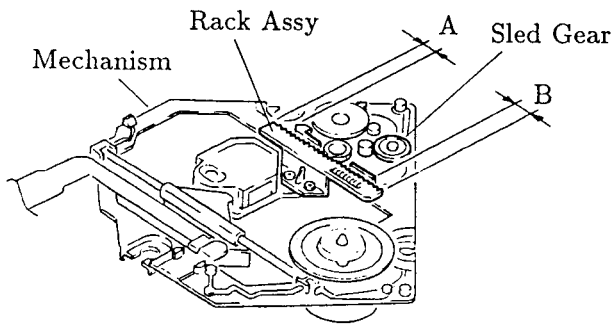

Fig-1

(2) Place the positioning jig on the mechanism as shown in figure 2.
The shaft comes in the "U" gutter of jig.

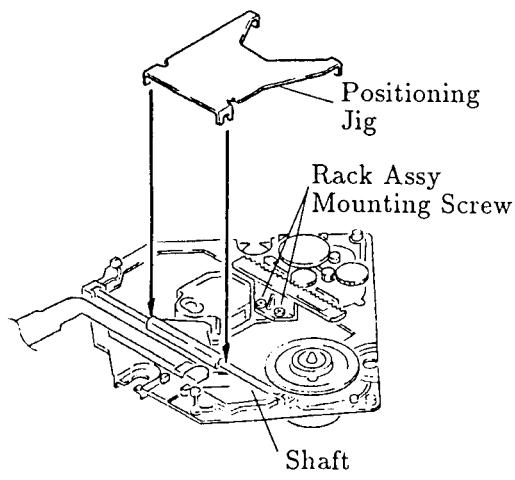

Fig-2

(3) While pressing the rack assy to the direction of arrow in order to keep the contact the teeth of rack gear with the jig, tighten the screws.

Note : Tighten the each screw alternately and little by little.

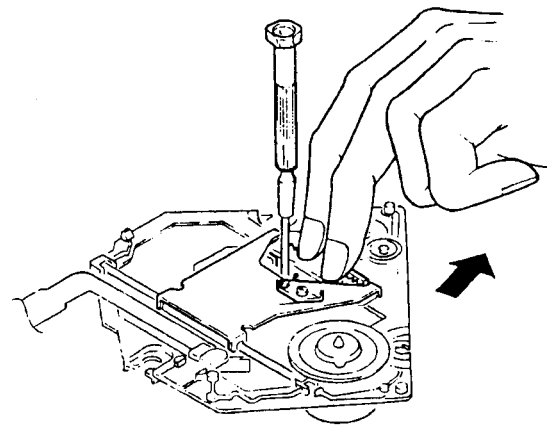

Fig-3

(4) Confirm the clearance between the teeth of rack gear and the jig as shown in figre 4.
Remove the rack assy side of jig first when removing the jig.
(Be sure not to remove it from the shaft side first.)

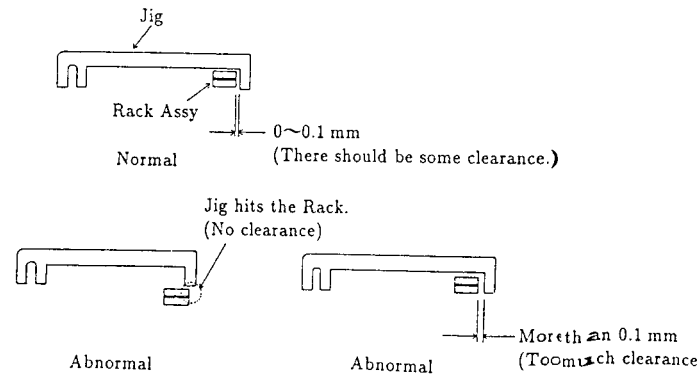

Fig-4

SECTION 2
GENERAL

This section is extracted from instruction manual.

Location and Function of Controls

See the pages indicated in ● for more details.

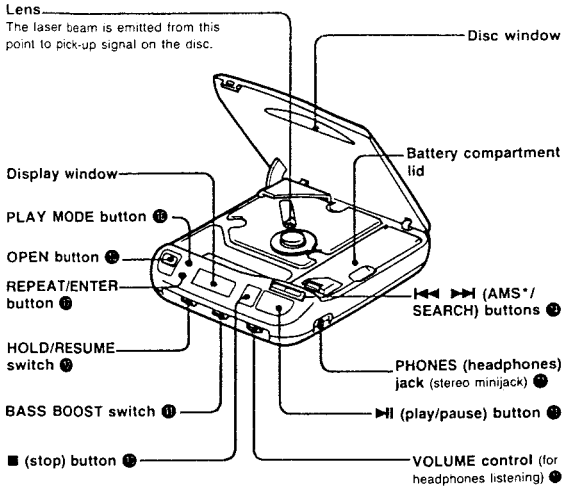

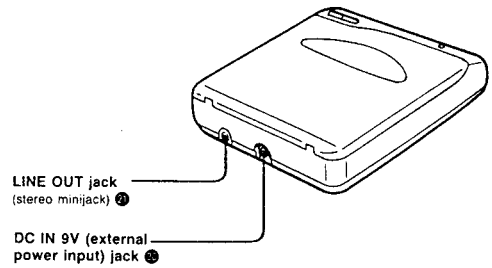

*AMS is an abbreviation for Automatic Music Sensor.

Disc Playing

To resume the disc play from the point where you last stopped the play (Resume play mode)

You can resume the disc play from the point where you last pressed ■. To enter this mode, set the HOLD/RESUME switch to the center or the right position. The resume function can be performed in any operation mode. (Refer to the table shown below.)

The positions of the HOLD/RESUME switch

	1st. (left)		2nd. (center)		3rd. (right)
Hold	OFF	—	OFF	—	ON
Resume play mode	OFF	—	ON	—	ON



You can hold the disc play locking the buttons to prevent them from being accidentally depressed. To enter this mode, set the HOLD/RESUME switch to the right position.

Note on the display window while the disc is playing

When the disc play start
The display window changes as follows.

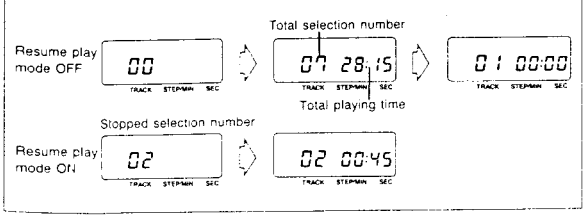

Notes
- We recommend you to install the batteries for the resume play. The memory of the stopped point will be maintained by the batteries even if you remove the car battery cord or AC power adaptor, or set the ignition key to the off position.
- The memory of the stopped point is canceled if you open the lid after pressing ■. After the memory is canceled, play starts from the first selection of the disc.

On Display Window

On time counter
When you press ⏯
Total selection number of the disc and then the total playing time appear.



During the play
The truck number and the elapsed playing time of the current selection appear.


1 min. 17 sec. has elapsed from the beginning of the fifth selection.

During the pause
The elapsed playing time of the current point flashes.


Pause mode at the point 1 min. 17 sec. from the beginning of the fifth selection

Between the selections
The time to the beginning of the next selection appears.


2 sec. to the beginning of the 3rd selection

Locating a Particular Portion

	To locate the beginning of the current selection	To locate the beginning of the next selection
Locating a particular selection (AMS*)	Press once.	Press once.
Locating a particular point in a selection (SEARCH)	To go back at high speed. Keep pressing.	To go ahead at high speed. Keep pressing.

* AMS is the abbreviation of Automatic Music Sensor.

Notes on the AMS function

- The player pauses at the beginning of the located selection when you press ⏮ or ⏭ in the pause mode.
- Each time you press ⏮, the player locates the previous selection. Each time you press ⏭, the player locates the next selections and stops at the last selection.
- During the programmed play, AMS operates in the programmed order.

Note on the SEARCH function

While searching, the elapsed playing time appears in the display window.

What is this indication?

_I_I appears if you continuously press ⏭ at the end of the disc. To return to the selection number indication, press ⏮.

Various Playing Modes

This unit has 10 playing modes.

To change the mode, press the PLAY MODE button during play. The current mode appears in the display window.

To play repeatedly, press REPEAT/ENTER button.
"REPEAT" appears in the display window.
Press again to cancel the repeat play.

To stop the disc, press ■ button.

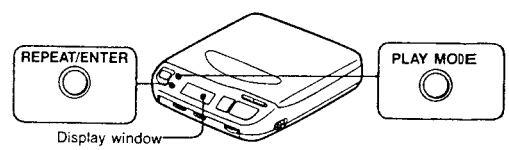

	REPEAT/ENTER button is not pressed.		REPEAT/ENTER button is pressed.	
	Display window	Playing mode	Display window	Playing mode
		Normal play Plays the whole disc once and stops.		Repeats the whole disc.
PLAY MODE		**INTRO play** Plays the first about ten seconds of all the selections. **To start playing** Press ⏯. "INTRO" stops flashing and playing starts.		Plays the first about ten seconds of all the selections again and again. Press ⏯ again to listen to the selection to the end.
PLAY MODE		**Playing a single selection** Plays one selection and stops at the end of the selection.		Plays a single selection repeatedly.
PLAY MODE		**Shuffle play** Plays the whole selection in a random order.		Plays the selections in random order repeatedly.

(To be continued)

SECTION 3
ELECTRICAL ADJUSTMENTS

Notes on Adjustment

1. Perform adjustments in service mode.
   Be sure to release service mode after completing adjustments.
   (Refer to "Service Mode (service program)" on page 5.)
2. Perform adjustments in the order given.
3. Use YEDS-18 disc (part No. : 3-702-101-01) unless otherwise indicated.
4. Power supply voltage : DC 9V
   HOLD switch : OFF

PREPARATION

Put the set into service mode (See page 5.) and perform the following checks. Repair if there are any abnormalities.

• Sled Motor Check

1. Press the OPEN button and open the top panel.
2. Press the ⏭, ⏮ keys and make sure that the optical pick-up block moves smoothly, without catching, from the inmost → outmost → inmost circumference.
   ⏭ : optical pick-up block moves outward
   ⏮ : optical pick-up block moves inward

• Focus Search Check

1. Press the OPEN button and open the top panel.
2. Press the ⏯ key. (Focus search is performed continuously.)
3. Observe the optical pick-up block objective lens and check that it moves smoothly up and down with no catching or noises.
4. Press the ■ key.
   Check that focus search operation stops. If it does not, press the ■ key again.

VC (1/2 Vcc) Connecting Point

FOCUS BIAS ADJUSTMENT
TRACKING BALANCE ADJUSTMENT

When the adjustments above are performed, connect the ⊖ side of oscilloscope to the point below.

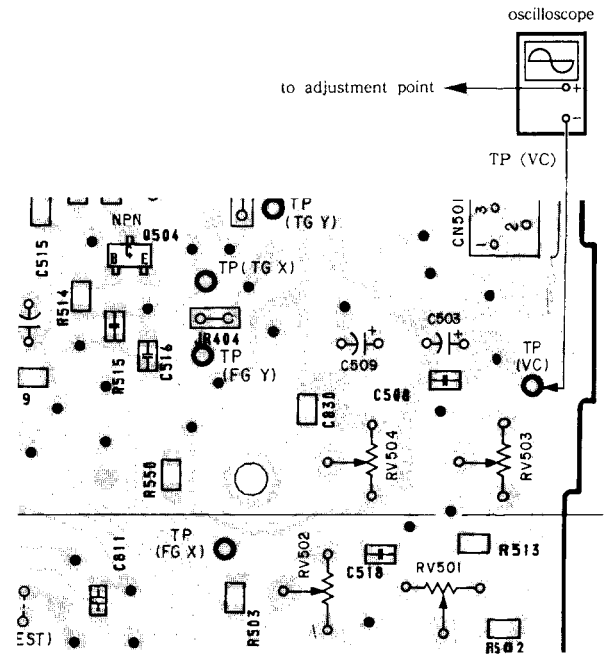

(CONDUCTOR SIDE)

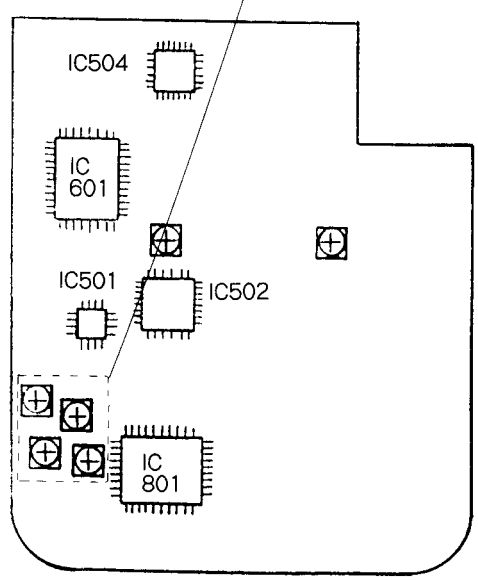

MAIN BOARD (COMPONENT SIDE)

AVCC (4.5V) Adjustment

Adjustment Procedure :

1. Put the set into service mode (see page 5).
2. Connect the VOM to main board test point TP (AVCC).
3. Adjust RV401 for 4.3V – 4.6V reading on the VOM.
4. After adjustment, release service mode (see page 5).

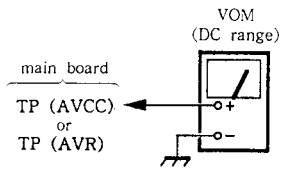

AVR (3.5V) Adjustment

Adjustment Procedure :

1. Put the set into service mode (see page 5).
2. Connect the VOM to main board test point TP (AVR).
3. Adjust the pattern connection (Ⓐ or Ⓑ) to obtain 3.45V to 3.6V reading on the VOM.

pattern connection		VOM reading
A	B	
○	×	down
×	×	↕
×	○	↕
○	○	up

○ : short × : open

Adjustment Location : main board

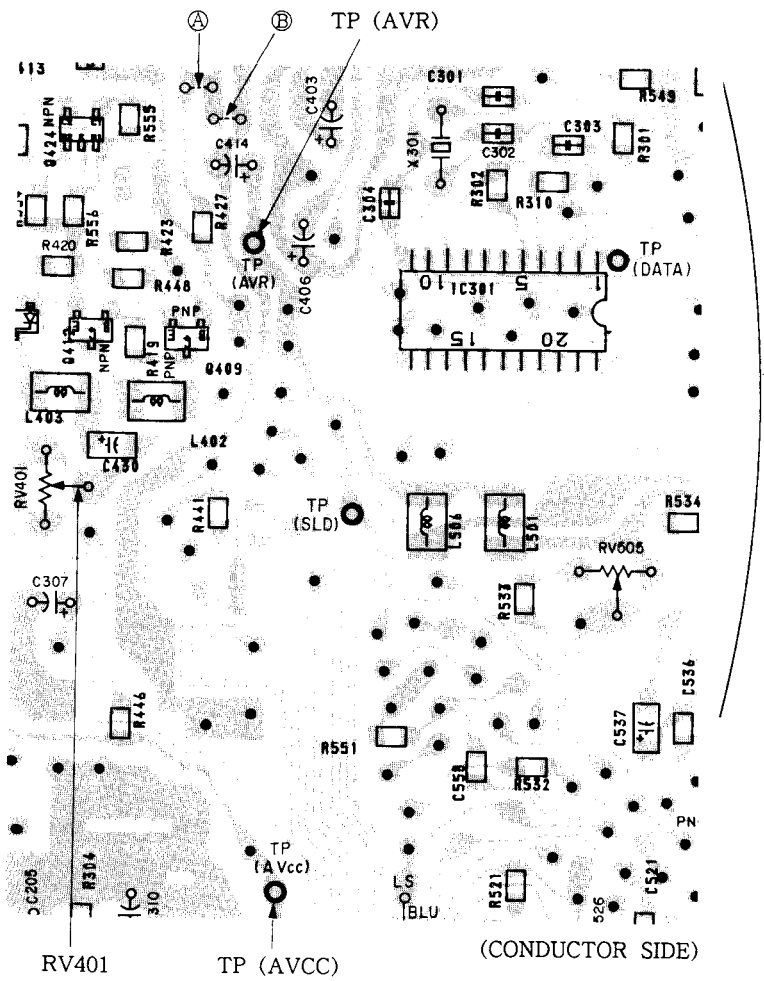

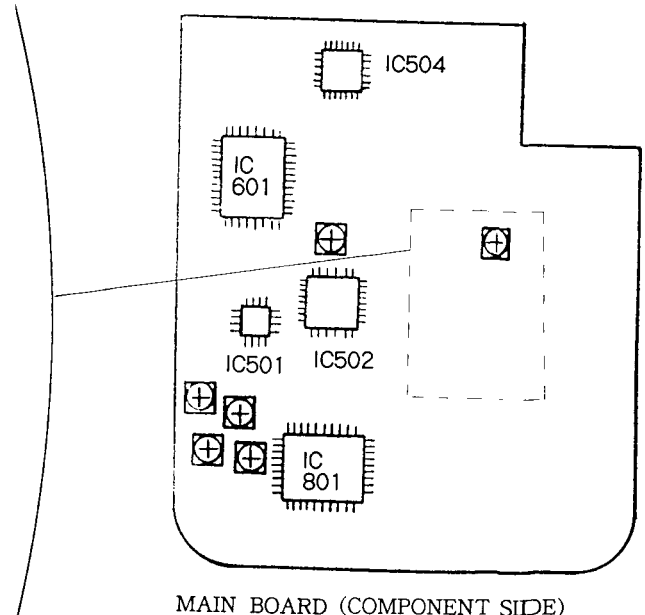

MAIN BOARD (COMPONENT SIDE)

PLL Free Run Frequency Check and Adjustment

Check/Adjustment Procedure :

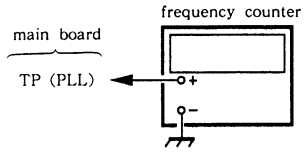

1. Disconnect ASY solder jumper terminal in the diagram below.
2. Connect a frequency counter to main board test point TP (PLL).
3. Put the set into service mode (See page 5).
4. Check that the frequency counter reading is 4.32±0.01 MHz. If not, adjust RV505 so that it is 4.32±0.01MHz.
5. After adjustment, release service mode (see page 5).
6. Short the jumper terminal disconnected in step 1.

Check/Adjustment Location : main board

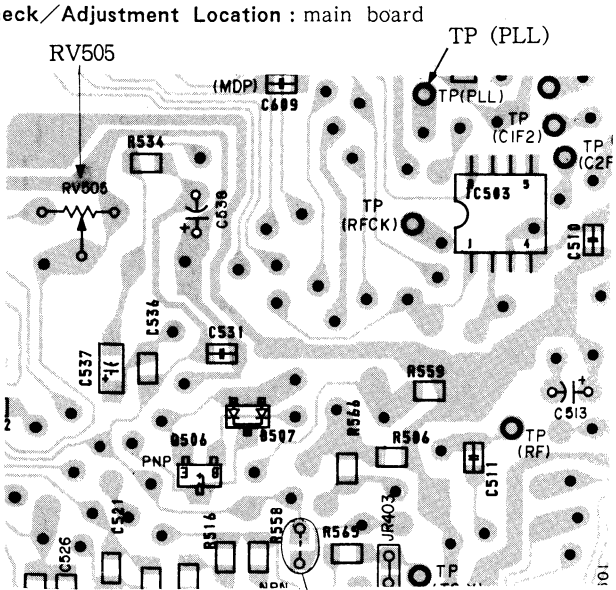

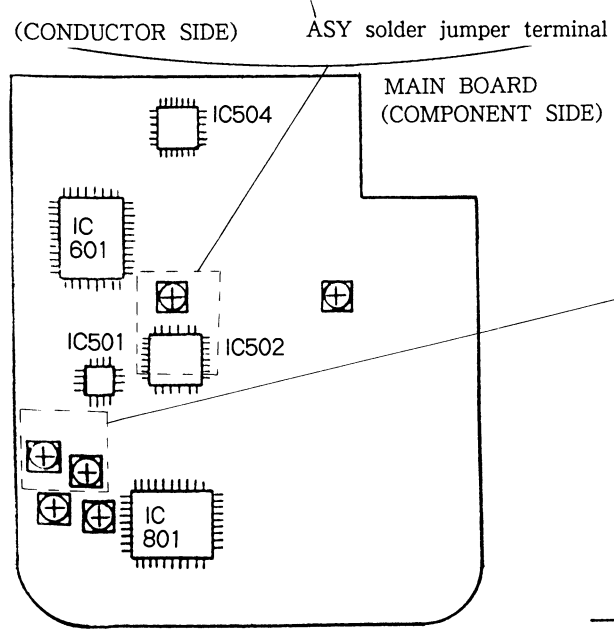

Tracking Balance Adjustment

Conditions :

The set should be placed either horizontally.

Adjustment Procedure :

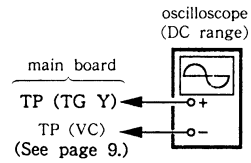

1. Connect the oscilloscope to main board TP (TG Y).
2. Put the set into service mode (See page 5.)
3. Press the ⏭ and ⏮ keys to move the opticl pick-up block to the center.
4. Insert the disc (YEDS-18) and close the top panel.
5. Press the ⏯ key.
   (It will go from focus search to focus on, and CLV pull-in mode state. Tracking and sled are OFF.)
6. Adjust RV503 so that the oscilloscope wavaform is symmetrical on the top and bottom in relation to 0V.

Note : Take sweep time as long as possible to obtain best waveform.

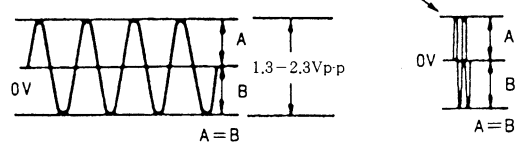

7. Press the ■ key.
8. After adjustment, release service mode (see page 5).

Adjustment Location : main board

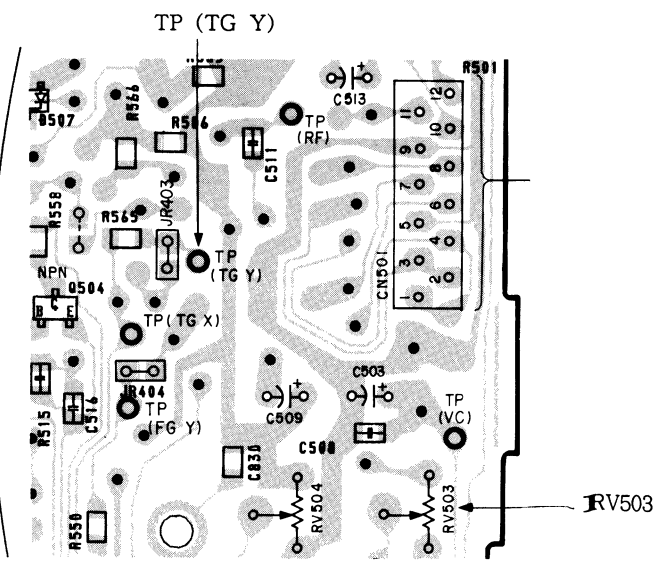

Focus Bias Adjustment

Conditions :

The set should be placed either horizontally.

Adjustment Procedure :

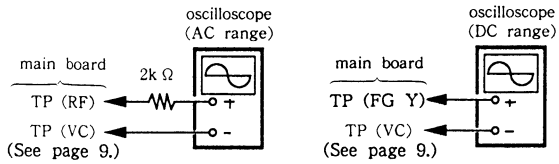

1. Put the set into service mode (See page 5).
2. Connect the oscilloscope to main board test point TP (RF).
3. Press the ⏭ and ⏮ key to move the optical pick-up block to the center. (Move the optical pick-up block to the music area on the disc to enable easy visibility of the eye pattern).
4. Insert the disc (YEDS-18) and close the top panel.
5. Press the ⏯ key.
   (It will go from focus search to focus on, and CLV pull-in mode state. Tracking and sled are OFF.)
6. Press the KEY-MODE button (Tracking and sled go ON.)
7. Adjust RV504 so that the oscilloscope waveform eye pattern is good. A good eye pattern means that the diamond shape (◇) in the center of the waveform can be clearly distinguished.

• RF Signal Reference Waveform (eye pattern)

VOLT/DIV : 200mV
TIME/DIV : 500nS

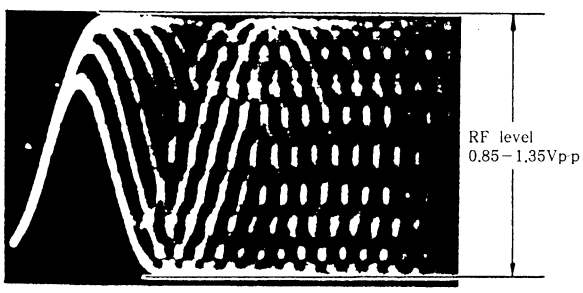

When observing the eye pattern, set the oscilloscope for AC range and raise vertical sensitivity.

8. Press the ■ key.
9. Remove the disc and connect the oscilloscope to main board TP (FG Y).
10. Adjust RV504 again refering to the table followed.

voltage of TP(FG Y)	Do not adjust again.
+80 to 200mV	Adjust RV504 again for +200mV reading on oscilloscope.
−20 to +80mV	Adjust RV504 again for −20mV reading on oscilloscope.

11. After adjustment, release service mode (see page 5).

Adjustment Location : main board

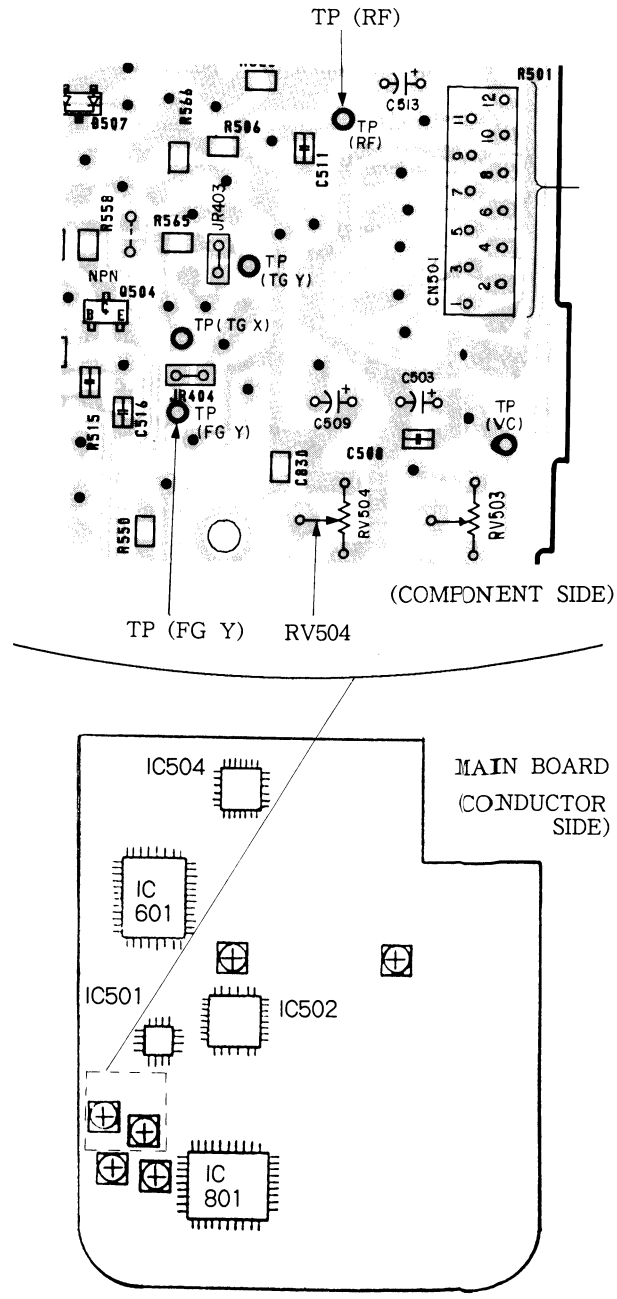

Reference

Focus/Tracking Gain Adjustment

A frequency responce analyzer or CD jig is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perfrom this adjustment.

Focus/tracking gain determines the pick-up followup (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operate.
However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is high, the noise when the 2-axis device operates increases.
- When gain is low, it is more susceptible to mechanical shock and skipping occurs more easily.

This adjustment is to be performed when replacing the following parts :

- UPF (optical pick-up block)
- RV501 (focus gain volume)
- RV502 (tracking gain volume)

On this set, it is very difficult to simplify this adjustment. For those sets on which symptoms such as "occasional skipping" are hard to discover, or it is hard to tell if the set has been repaired, use the CD jig and perform this adjustment. Refer to the diagram below for connection of the CD jig. The adjustment procedure is described in the separate CD jig Instruction Manual.

Please be careful no to move RV501 (focus gain volume), RV502 (tracking gain volume) ordinarily.

MAIN BOARD (COMPONENT SIDE)

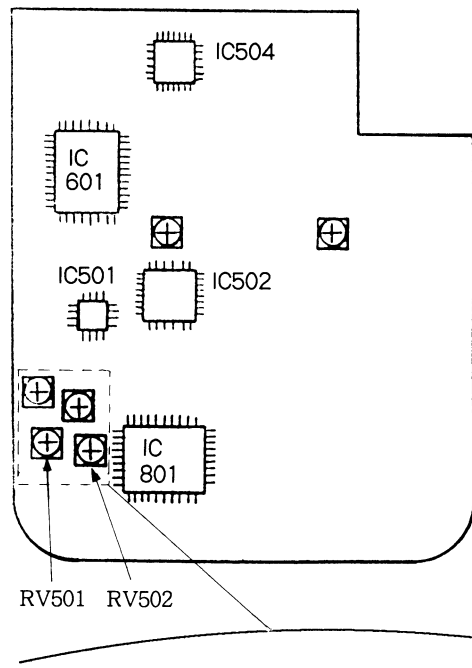

(CONDUCTOR SIDE)

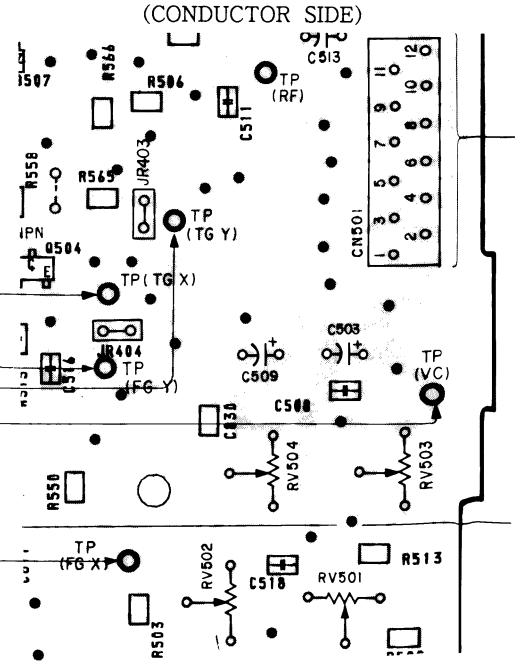

CD jig connection :

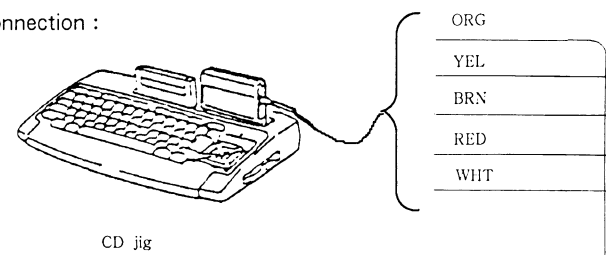

CD jig

Remove the solder jumpers at the TG and FG locations and connect the CD jig.

SECTION 4
DIAGRAMS

4-1. SEMICONDUCTOR LEAD LAYOUTS

BA3570F
SM5840CS

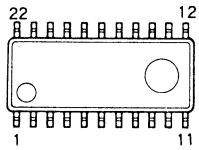

μPC1715

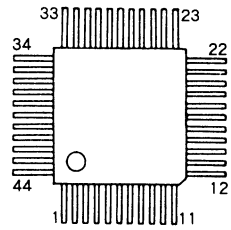

1MN10

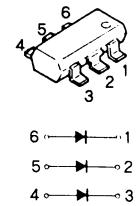

CXA1271Q

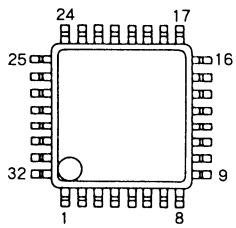

(TOP VIEW)

2SB1120
2SD999-CLCK

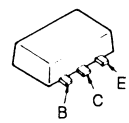

E10QS04



1 Anode
2 Cathode
3 NC

CXP5084-640Q

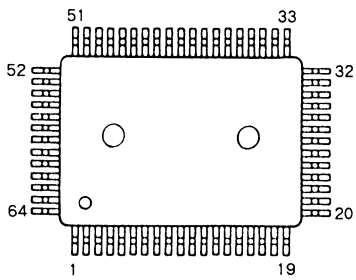

(TOP VIEW)

2SD1758F5-QR



1 BASE
2 COLLECTOR
3 EMITTER
4 COLLECTOR

MA152WK



FMW1





1 Tr1 : Collector 1
2 Tr2 : Collector 2
3 Tr2 : Base 2
4 Tr1,2 : Emitter
5 Tr1 : Base 1

SC7S04F

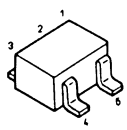

RB411D
RD10M-B1
RD5.1M-B2
RD7.5M-B1
SB01-05CP



4-2. BLOCK DIAGRAM

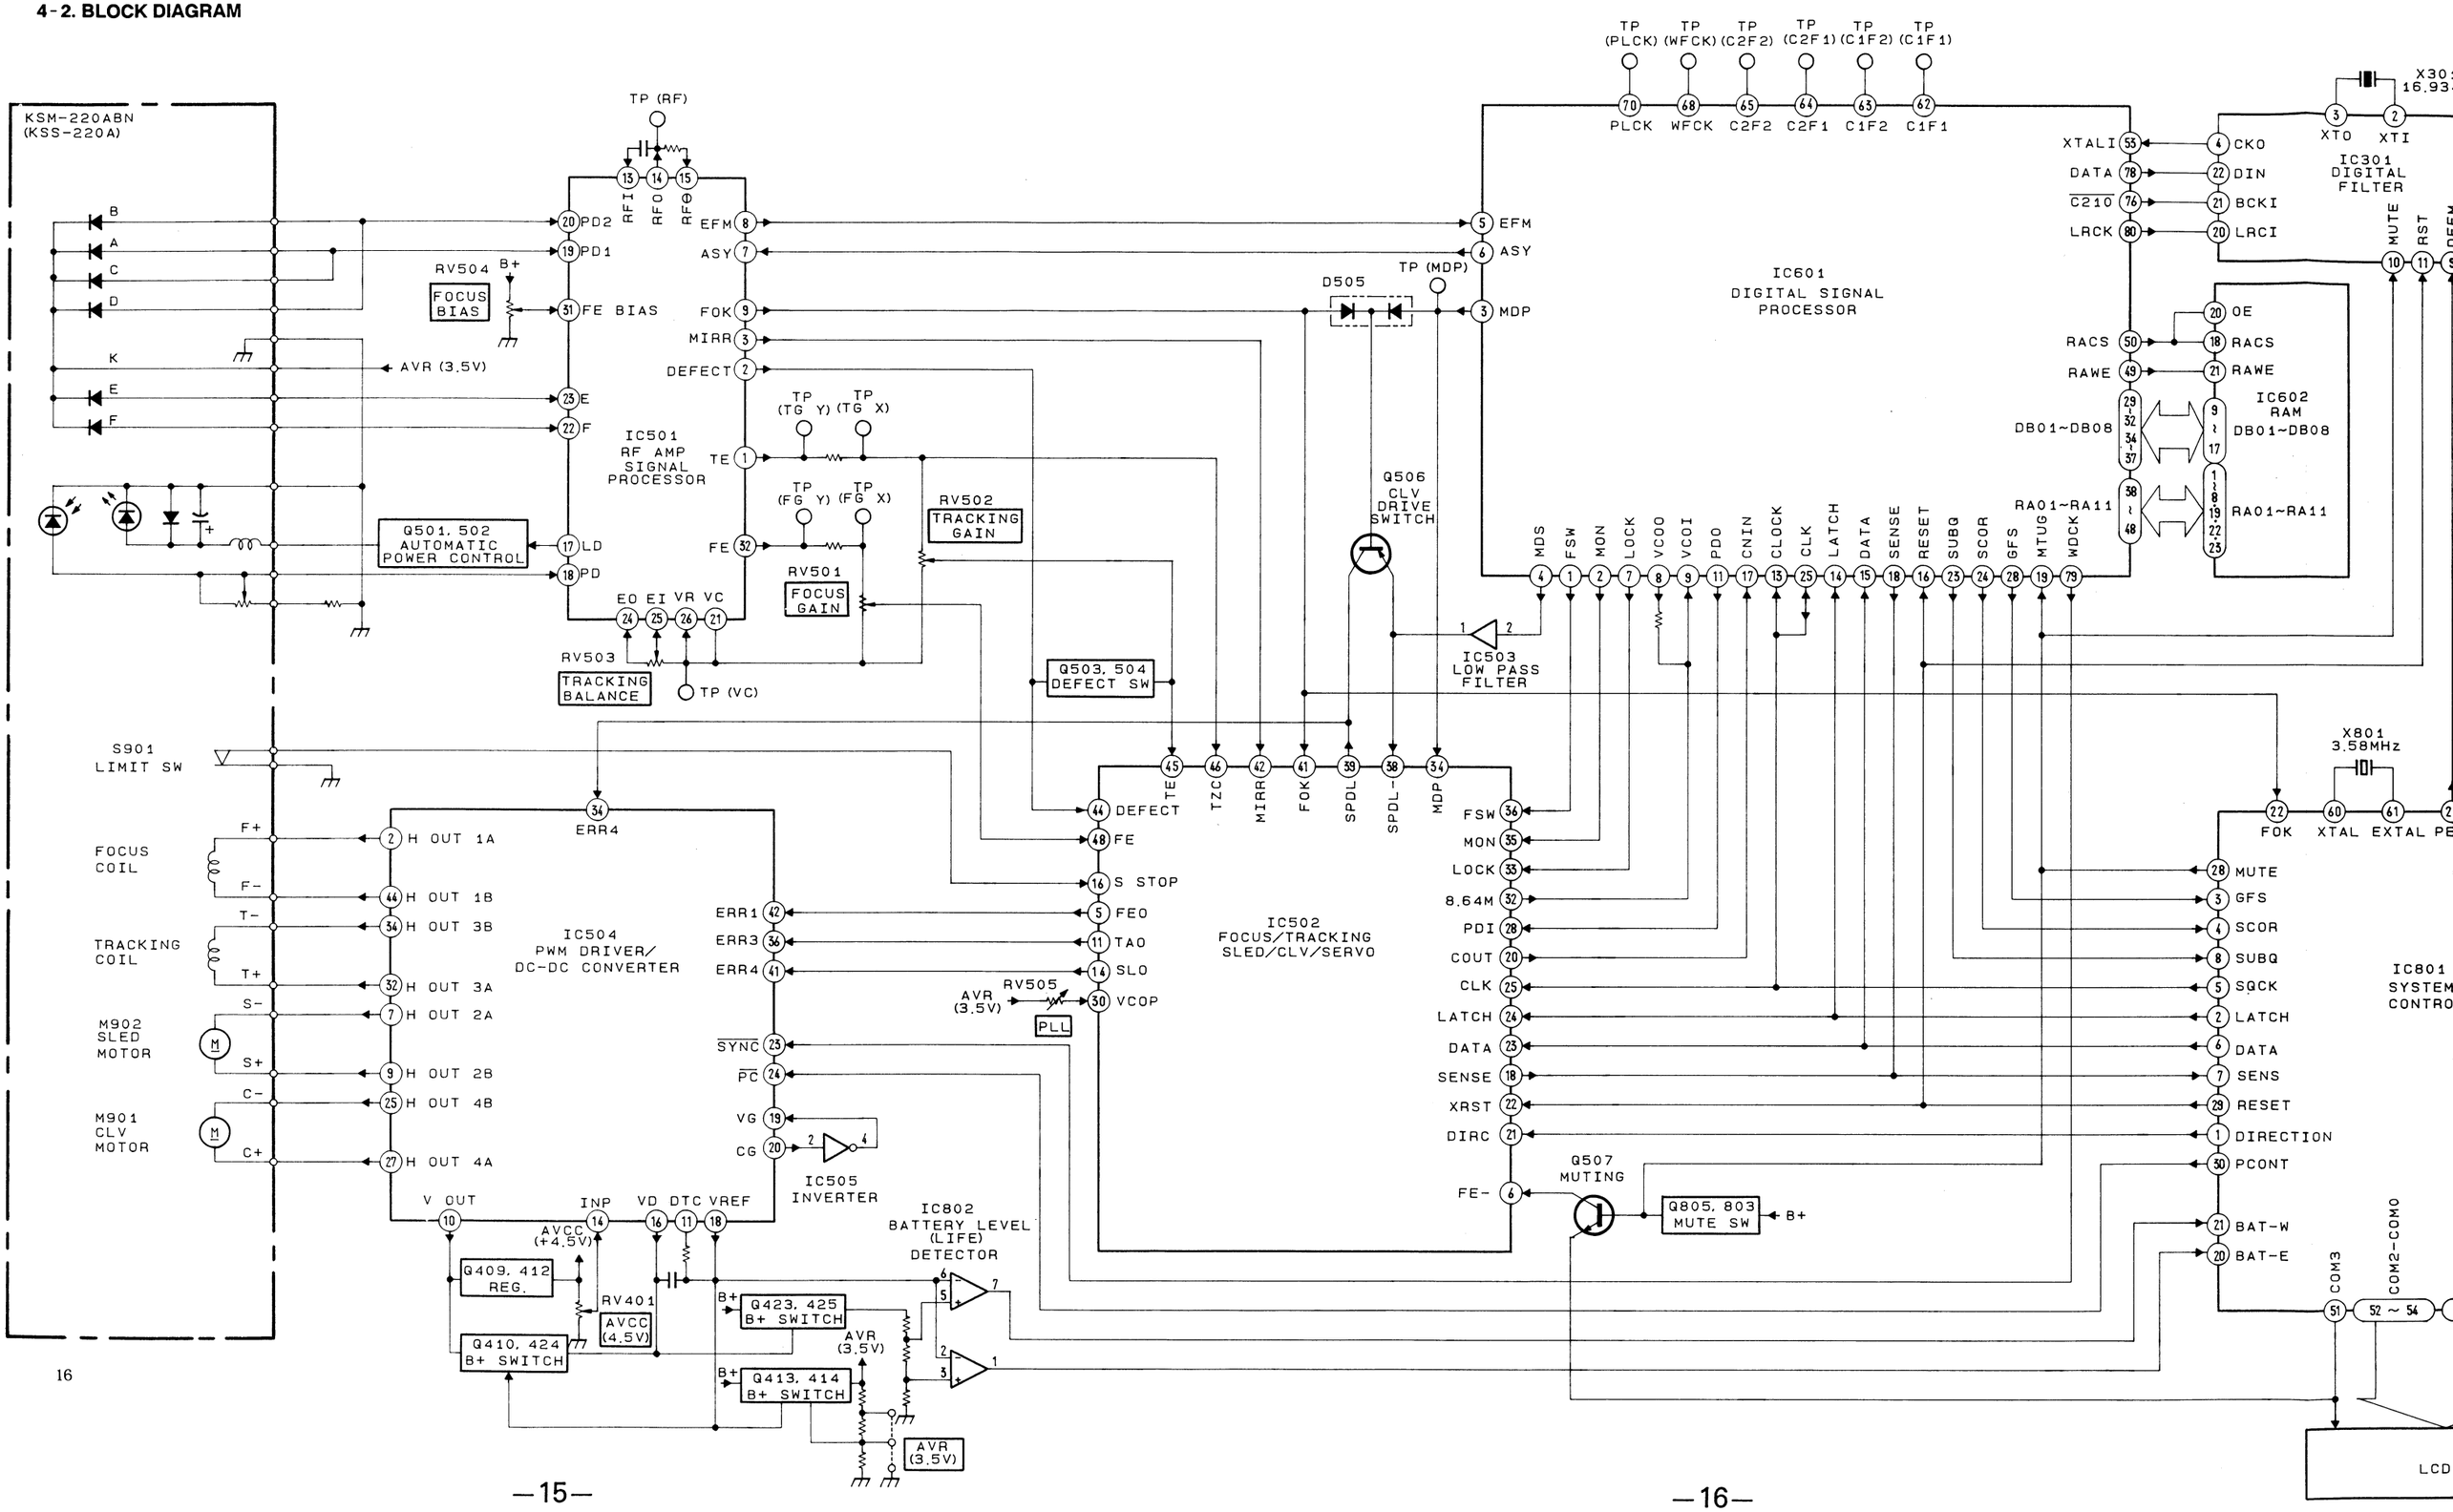

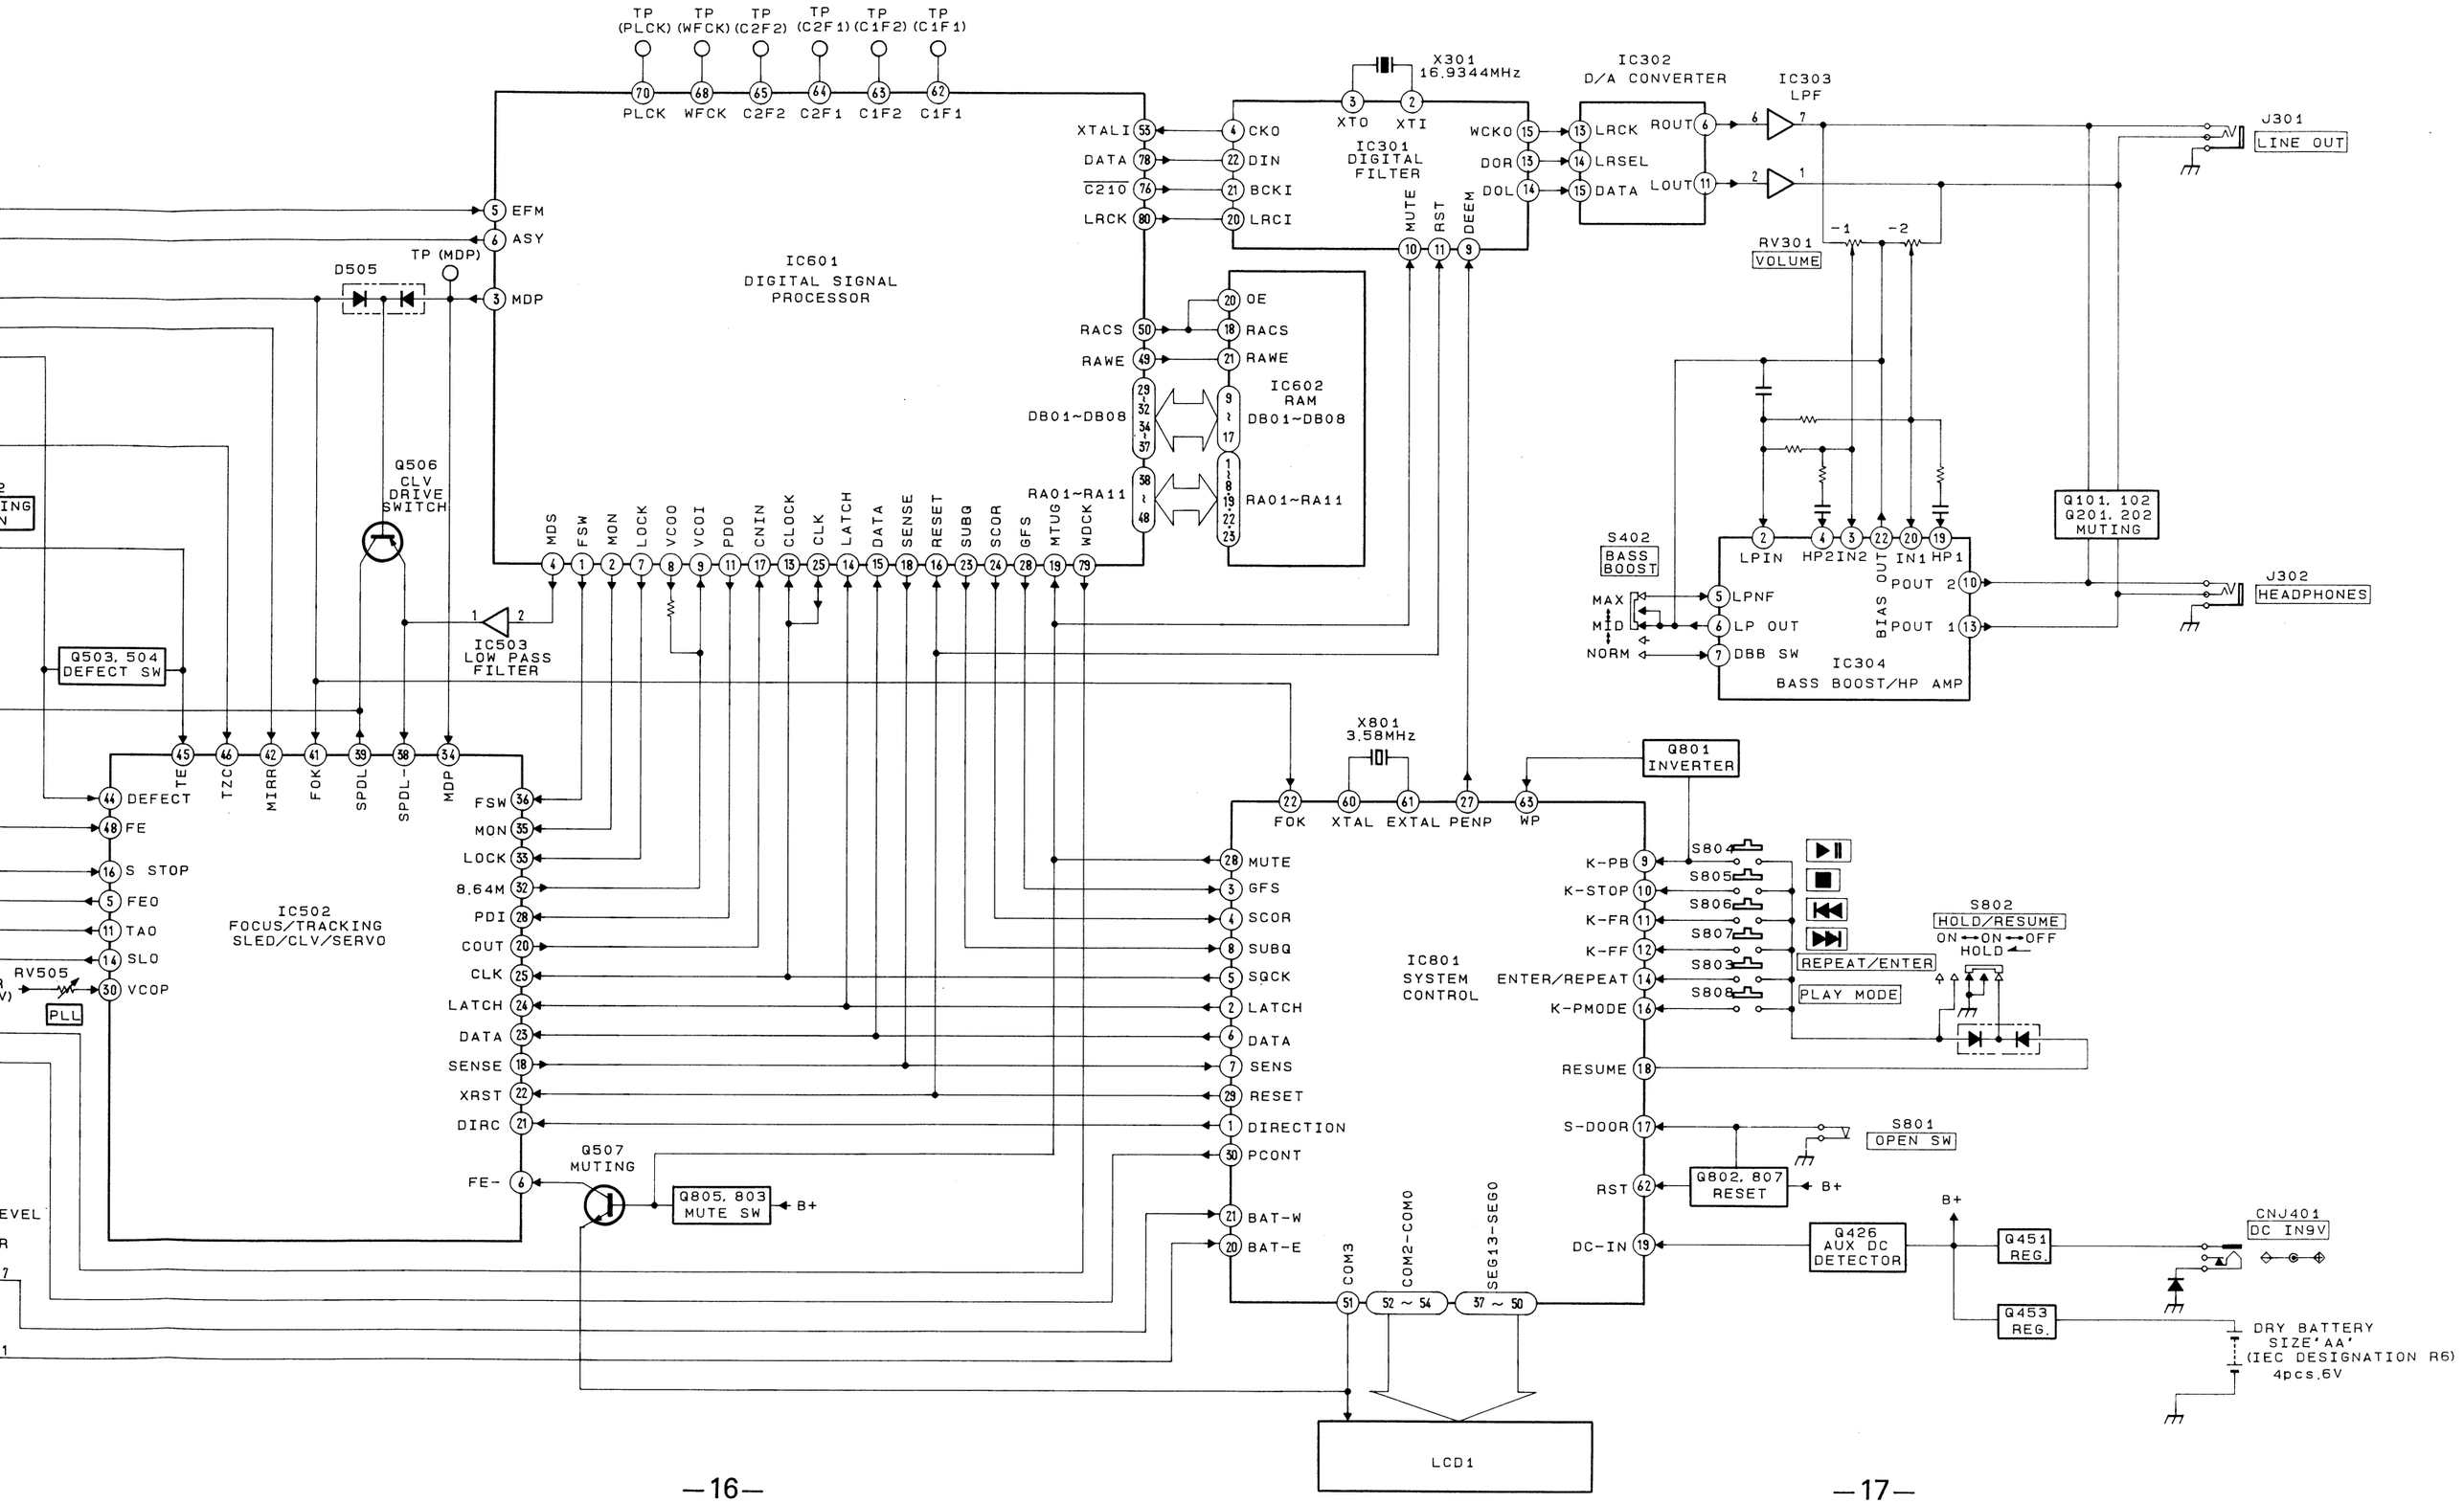
TP (PLCK)
TP (WFCK)
TP (C2F2)
TP (C2F1)
TP (C1F2)
TP (C1F1)
PLCK
WFCK
C2F2
C2F1
C1F2
C1F1
X301 16.9344MHz
XTO
XTI
IC302 D/A CONVERTER
IC303 LPF
J301 LINE OUT
WCKO
DOR
DOL
LRCK
LRSEL
DATA
ROUT
LOUT
IC301 DIGITAL FILTER
XTALI
DATA
C210
LRCK
CKO
DIN
BCKI
LRCI
MUTE
RST
DEEM
RV301 VOLUME
EFM
ASY
MDP
TP (MDP)
D505
IC601 DIGITAL SIGNAL PROCESSOR
OE
RACS
RAWE
DB01~DB08
RA01~RA11
IC602 RAM
Q506 CLV DRIVE SWITCH
MDS
FSW
MON
LOCK
VCOO
VCOI
PDO
CNIN
CLOCK
CLK
LATCH
DATA
SENSE
RESET
SUBQ
SCOR
GFS
MTUG
WDCK
IC503 LOW PASS FILTER
S402 BASS BOOST
LPIN
HP2IN2
IN1
HP1
BIAS OUT
POUT 2
POUT 1
MAX
MID
NORM
LPNF
LP OUT
DBB SW
IC304 BASS BOOST/HP AMP
Q101, 102 Q201, 202 MUTING
J302 HEADPHONES
Q503, 504 DEFECT SW
X801 3.58MHz
Q801 INVERTER
TE
TZC
MIRR
FOK
SPDL
SPDL-
MDP
DEFECT
FE
S STOP
FEO
TAO
SLO
VCOP
RV505
PLL
IC502 FOCUS/TRACKING SLED/CLV/SERVO
FSW
MON
8.64M
PDI
COUT
CLK
LATCH
DATA
SENSE
XRST
DIRC
FE-
Q507 MUTING
Q805, 803 MUTE SW
B+
FOK
XTAL
EXTAL
PENP
WP
MUTE
GFS
SCOR
SUBQ
SQCK
LATCH
DATA
SENS
RESET
DIRECTION
PCONT
BAT-W
BAT-E
IC801 SYSTEM CONTROL
K-PB
K-STOP
K-FR
K-FF
ENTER/REPEAT
K-PMODE
RESUME
S-DOOR
RST
DC-IN
S804
S805
S806
S807
S803
S808
REPEAT/ENTER
PLAY MODE
S802 HOLD/RESUME
ON ON OFF
HOLD
S801 OPEN SW
Q802, 807 RESET
Q426 AUX DC DETECTOR
Q451 REG.
Q453 REG.
CNJ401 DC IN9V
DRY BATTERY SIZE'AA' (IEC DESIGNATION R6) 4pcs.6V
COM3
COM2-COM0
SEG13-SEG0
52 ~ 54
37 ~ 50
LCD1

4-3. PRINTED WIRING BOARD

• See page 14 for Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location
D401	B-5
D402	C-5
D405	D-14
D409	D-4
D501	B-14
D502	B-12
D503	B-12
D504	B-12
D505	F-12
D507	F-7
D601	D-7
D801	G-13
D804	I-8
D805	I-11
D806	G-13
IC301	D-6
IC302	F-14
IC303	E-3
IC304	F-3
IC501	G-11
IC502	F-12
IC503	E-8
IC504	C-12
IC505	B-13
IC601	E-11
IC602	D-8
IC801	H-12
IC802	I-11
Q101	G-5
Q102	H-5
Q201	G-4
Q202	H-5
Q409	D-5
Q410	C-4
Q412	D-4
Q413	C-4
Q414	C-5
Q423	E-14
Q424	D-4
Q425	D-14
Q426	E-14
Q451	D-14
Q453	B-5
Q501	E-10
Q502	F-10
Q503	G-11
Q504	G-7
Q506	F-7
Q507	H-14
Q801	H-13
Q802	I-7
Q803	H-14
Q805	H-14
Q807	I-8

Note on Mounting Diagram :

- ○—— : Parts extracted from the component side.
- ● : Through hole.
- ▒▒ : Pattern on the side which is seen.
- ▒▒ : Pattern of the rear side.

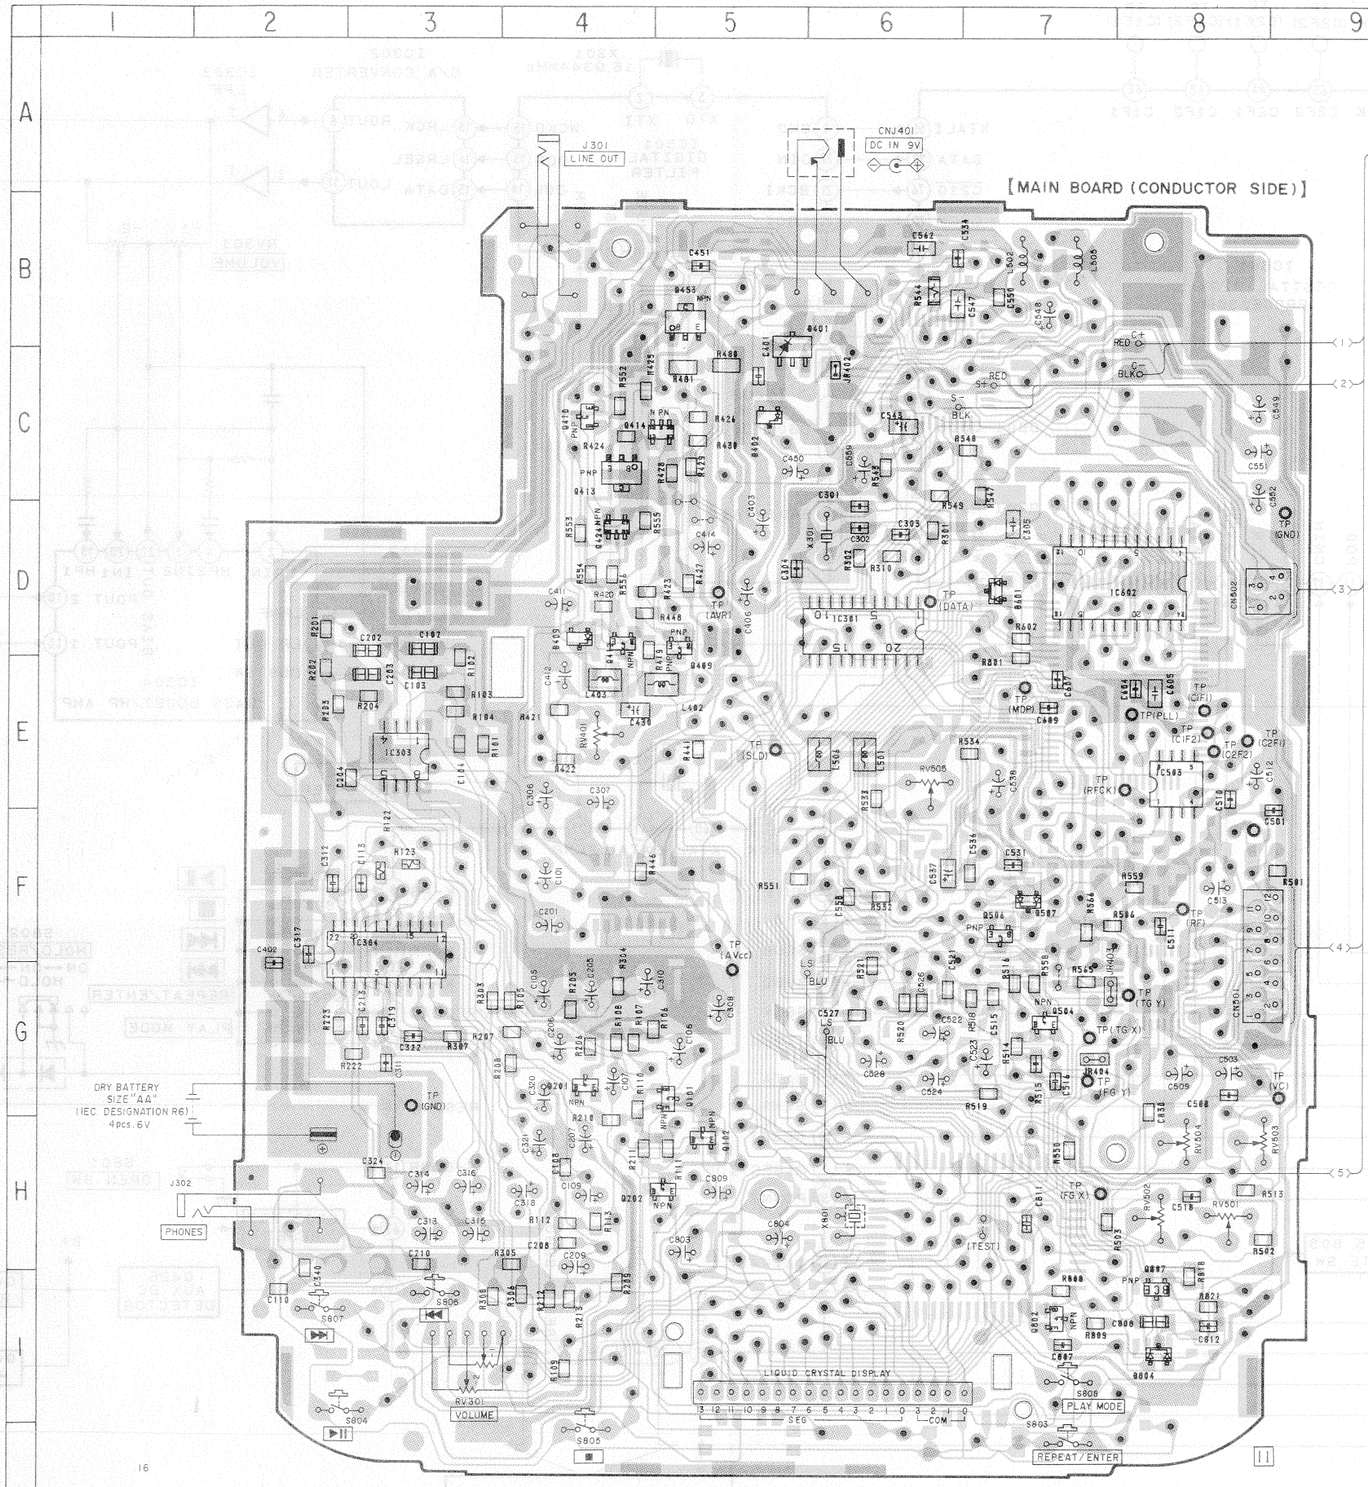

5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

[MAIN BOARD (CONDUCTOR SIDE)]

CNJ401
DC IN 9V

[MAIN BOARD (COMPONENT SIDE)]

S801
OPEN SW

S901
LIMIT SWITCH
(ON: OPTICAL PICK-UP BLOCK REACHES INNER POSITION

M902
SLED MOTOR

M901
CLV MOTOR

OPTICAL
PICK-UP BLOCK
KSM-220ABN

LIQUID CRYSTAL DISPLAY

PLAY MODE

REPEAT/ENTER

RESUME OFF ON
HOLD

S802
HOLD/
RESUME

NORM → MID → MAX

S402
BASS
BOOST

4-4. SCHEMATIC DIAGRAM • See page 24 for IC Block Diagrams.

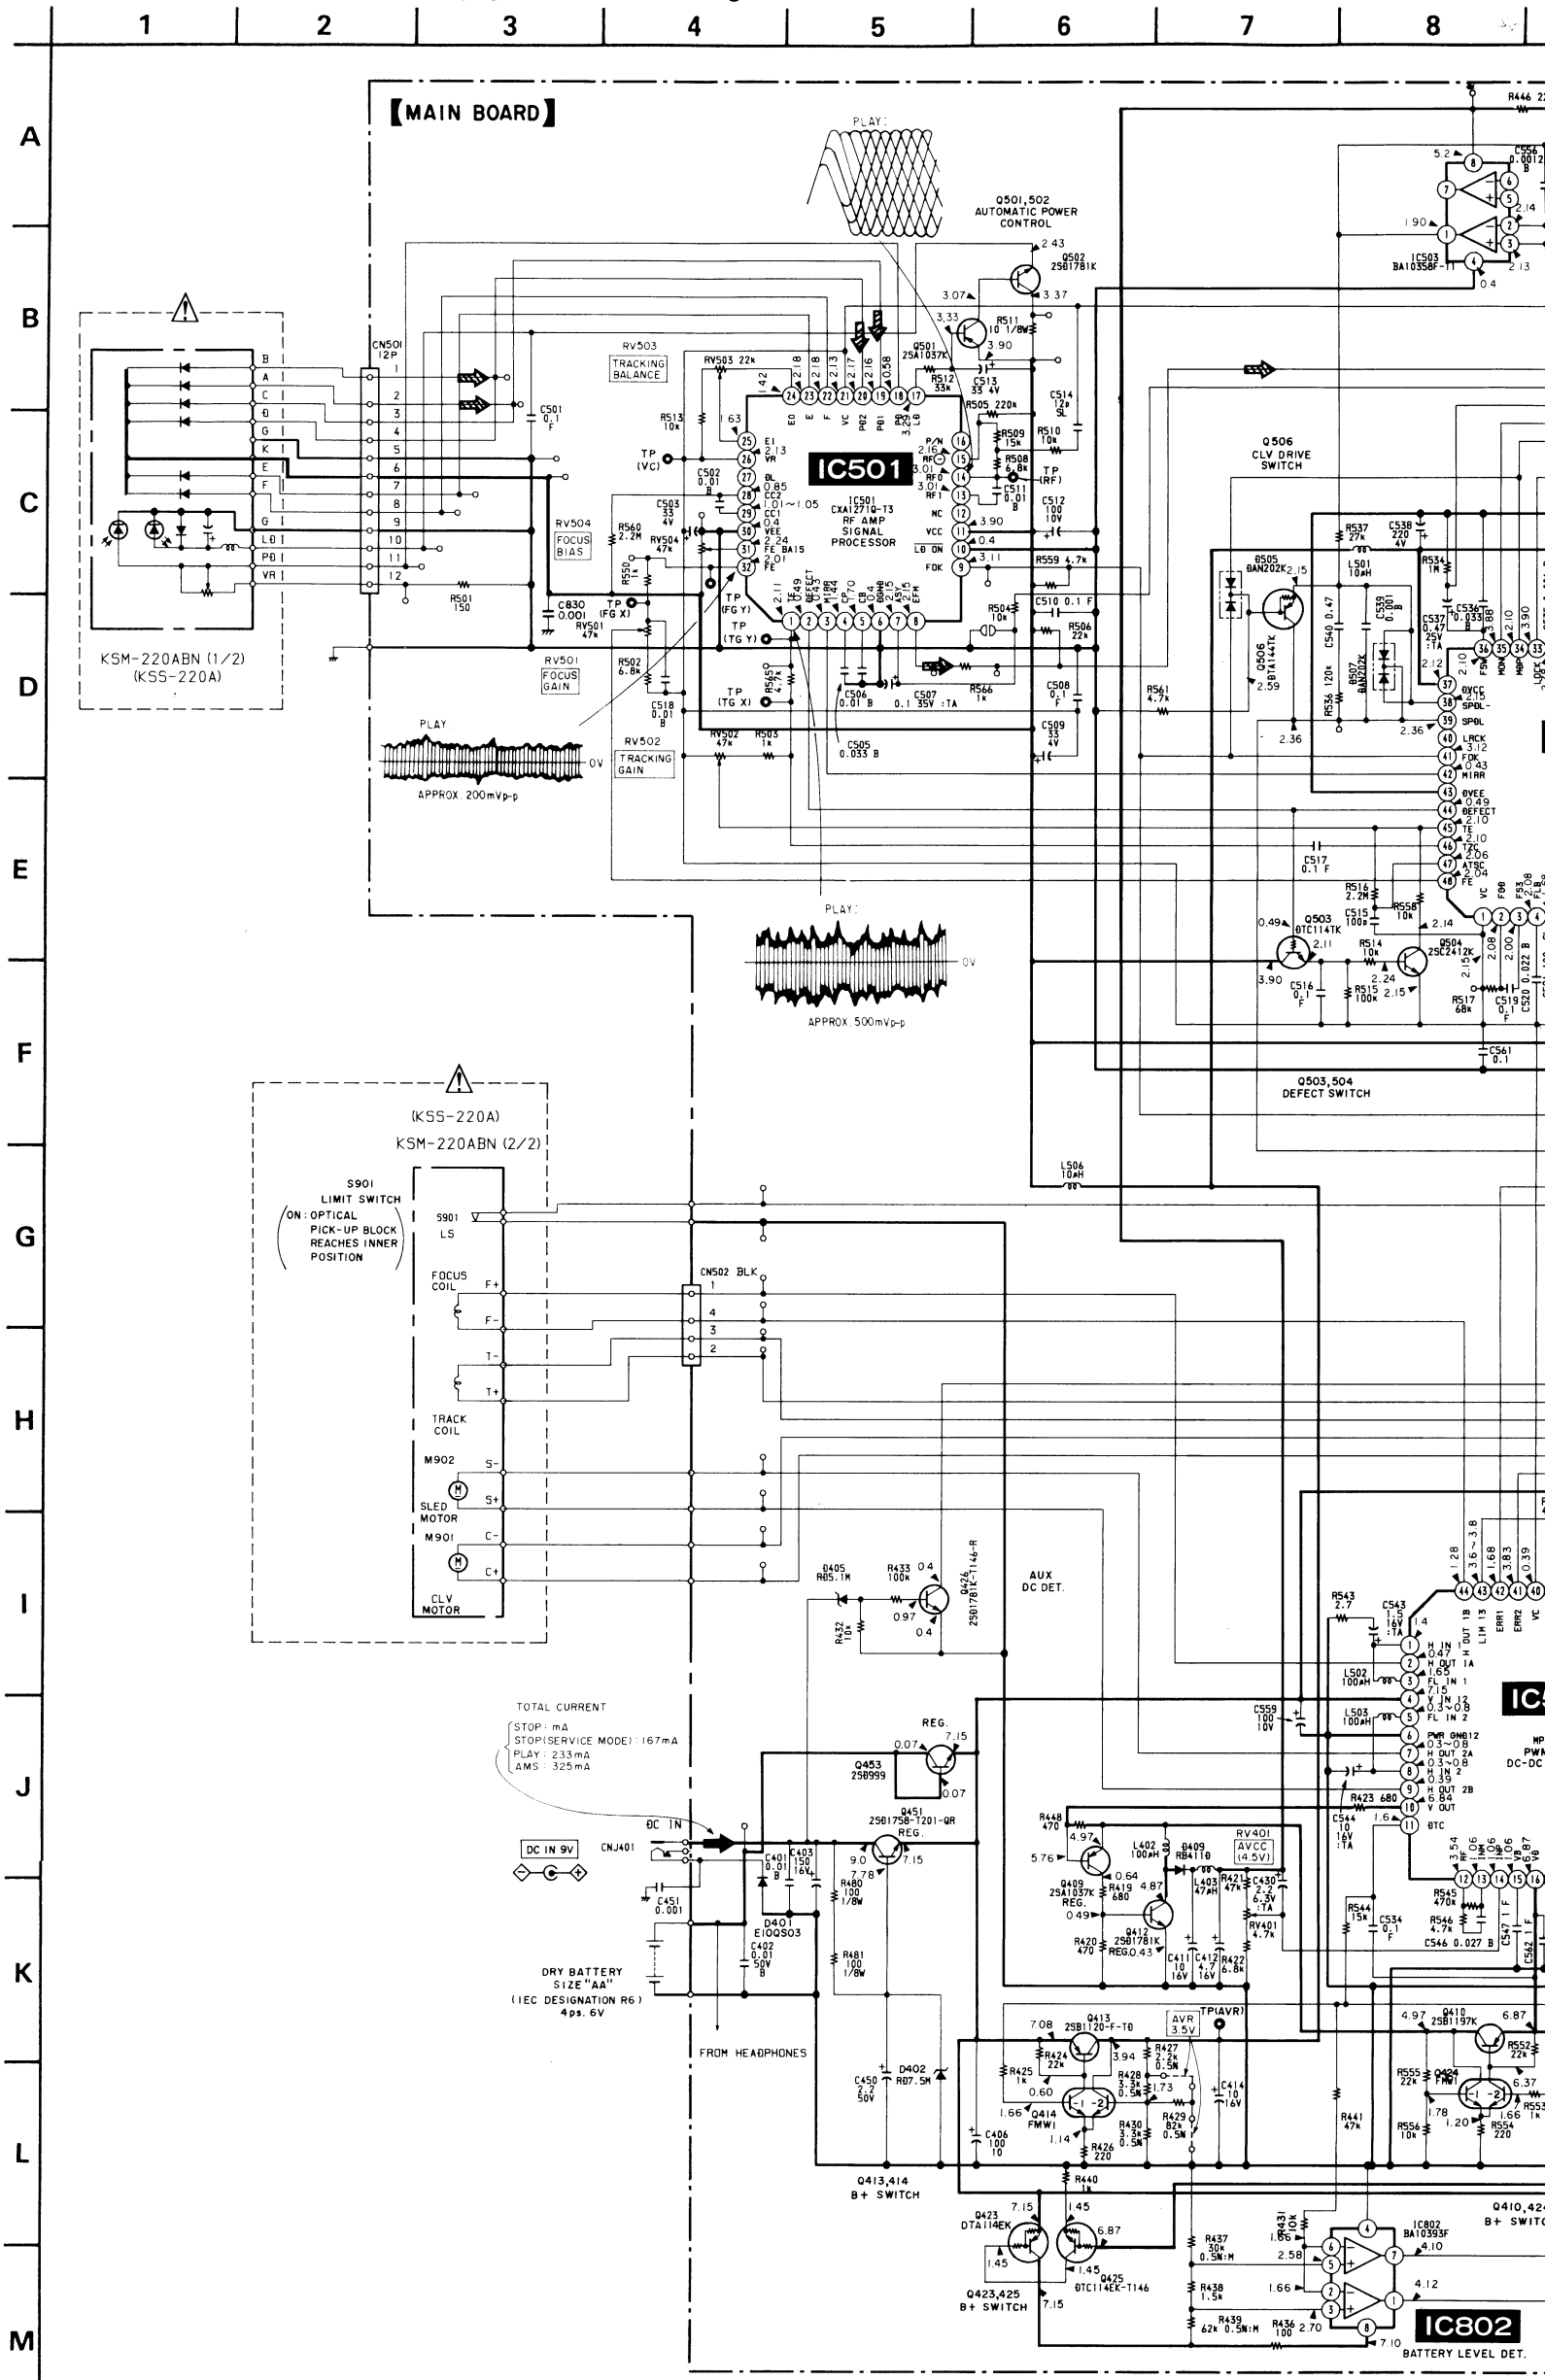

16

Note on Schematic Diagram :

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- % : indicates tolerance.

Note:	**Note:**
The components identified by matk ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number sppecified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifie.

- ▬▬ : B + Line.
- ▭ : adjustment for repair.
- Power voltage is dc 6V and fed with regulated dc power supply from battery terminal.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- Voltages are taken with a VOM (input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path. ▻▻ : CD

• See page 24 for IC Block Diagrams.

3 4 5 6 7 8 9 10 11 12 13 14

【MAIN BOARD】

(KSS-220A)
KSM-220ABN (2/2)

IC501
CXA2710-T3
RF AMP
SIGNAL
PROCESSOR

IC502
CXA2772Q-T1-Z
FOCUS/TRACKING
SLED/CLV SERVO

IC503
LOW PASS
FILTER

IC504
WPC1715FU
PWM DRIVER/
DC-DC CONVERTER

IC505
INVERTER

IC601
CXD1130Q
DIGITAL SIGNAL
PROCESSOR
/CLV SERVO

IC602
RAM

IC801
CXP5084-640Q
SYSTEM CONTROL

IC802
BATTERY LEVEL DET.

Q501,502
AUTOMATIC POWER
CONTROL

Q506
CLV DRIVE
SWITCH

Q503,504
DEFECT SWITCH

Q413,414
B+ SWITCH

Q410,424
B+ SWITCH

Q423,425
B+ SWITCH

AUX
DC DET.

RV503
TRACKING
BALANCE

RV504
FOCUS
BIAS

RV501
FOCUS
GAIN

RV502
TRACKING
GAIN

RV505
PLL

S901
LS

FOCUS
COIL

TRACK
COIL

M902
SLED
MOTOR

M901
CLV
MOTOR

CN502 BLK

TOTAL CURRENT
STOP : mA
STOP(SERVICE MODE) : 167mA
PLAY : 233mA
AMS : 325mA

DC IN
DC IN 9V
CNJ401

DRY BATTERY
SIZE "AA"
(IEC DESIGNATION R6)
4ps. 6V

FROM HEADPHONES

TP (VC)
TP (FG X)
TP (FG Y)
TP (TG Y)
TP (TG X)
TP (RF)
TP (MOP)
TP (PLL)
TP (RFCK)
TP (C1F2)
TP (C2F2)
TP (C1F1)
TP (C2F1)
TP (SLD)

PLAY:
APPROX. 200mVp-p

PLAY:
APPROX. 500mVp-p

5.6μSEC
230n SEC
190n SEC
30μSEC
1μSEC
100n SEC
4Vp-p
5.2Vp-p
1.6Vp-p
2Vp-p

IC503
LOW PASS FILTER

IC502
CXA1272Q-T1-Z
FOCUS/TRACKING SLED/CLV SERVO

IC601
CX81130Q
DIGITAL SIGNAL PROCESSOR /CLV SERVO

IC602
RAM

IC301
SM5840CS-E
DIGITAL FILTER

IC302
D/A CONVERTER

IC303
LPF

IC304
BASS BOOST/HP AMP

IC801
CXP5084-640Q
SYSTEM CONTROL

IC505
TC7S04F
INVERTER

IC504
C1715FU
DRIVER/ CONVERTER

RV505 PLL

TP (MOP)
TP (PLL)
TP (RFCK)
TP (C1F2)
TP (C2F1)
TP (C1F2)
TP (C1F1)
TP (DATA)
TP (AVCC)
TP (SLD)

16.9344MHz

X801 3.58MHz

Q101,201 MUTING
Q102,202 MUTING
Q507 MUTING
Q805,803 MUTE SWITCH
Q802,807 RESET

RV301 VOLUME
RV301-1
RV301-2

J301 LINE OUT
J302 HEADPHONES

S402 BASS BOOST (MAX / MID / NORM)

HOLD/RESUME
RESUME ON ON OFF
HOLD ON OFF OFF
S802

OPEN SW
S801

S808 PLAY-MODE
S807
S806 AMS/SEARCH
S805
S804
S803 ENTER/REPEAT

TO BATT+

5.6μSEC
230nSEC
190nSEC
130μSEC
11μSEC
100nSEC
56nSEC
250nSEC
9.4mSEC
280nSEC

4Vp-p
5.2Vp-p
1.6Vp-p
2Vp-p
4.8Vp-p
5.1Vp-p
4.6Vp-p
3.6Vp-p
2.4Vp-p

LCD

⊙WAVEFORM CHANGES DEPENDING ON INDICATION.

4-5. IC BLOCK DIAGRAMS

IC301 SM5840CS

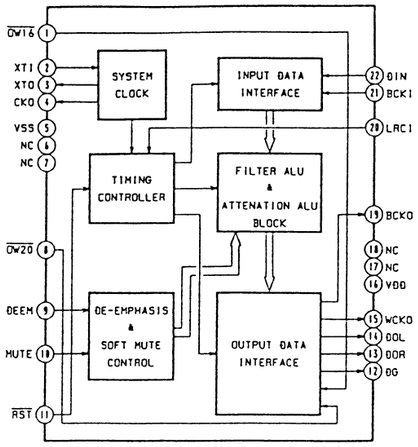

IC302 μPD6376

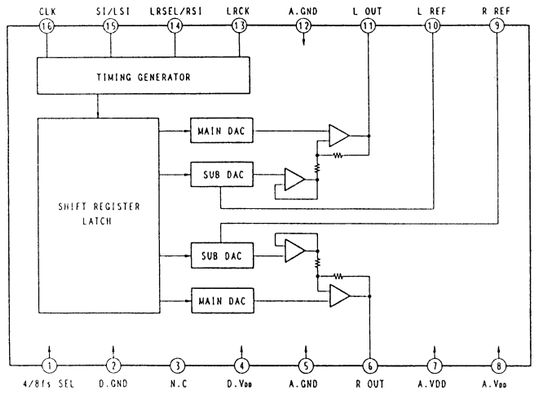

IC304 BA3570F

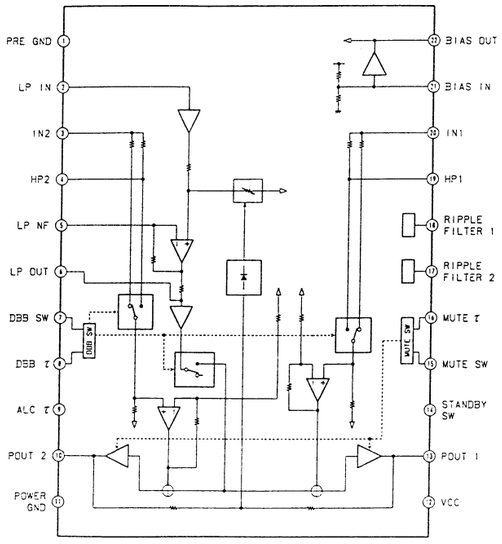

IC502 CXA1272Q-Z

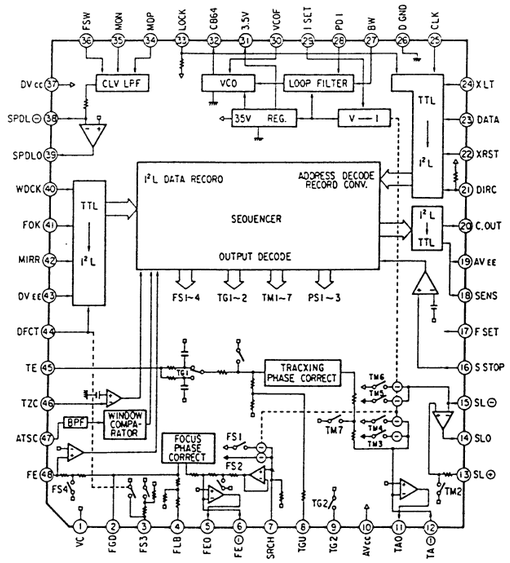

IC501 CXA1271Q

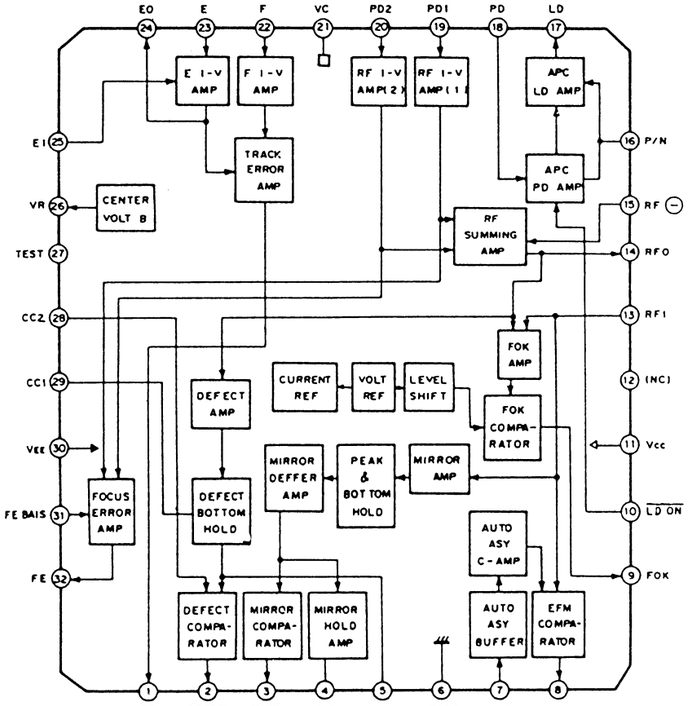

IC504 μPC1715FU

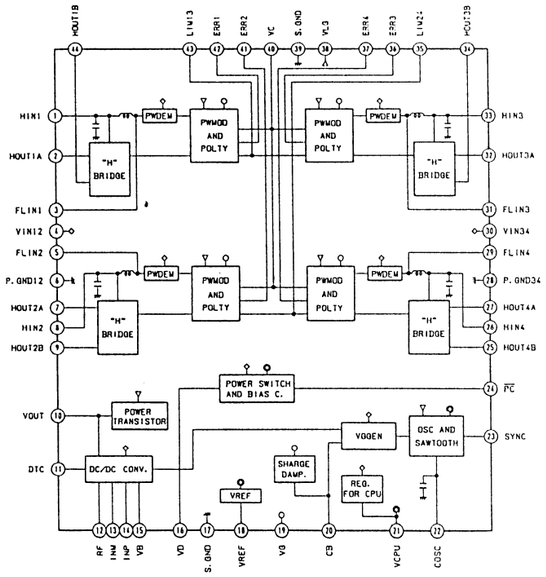

IC601 CXD1130Q

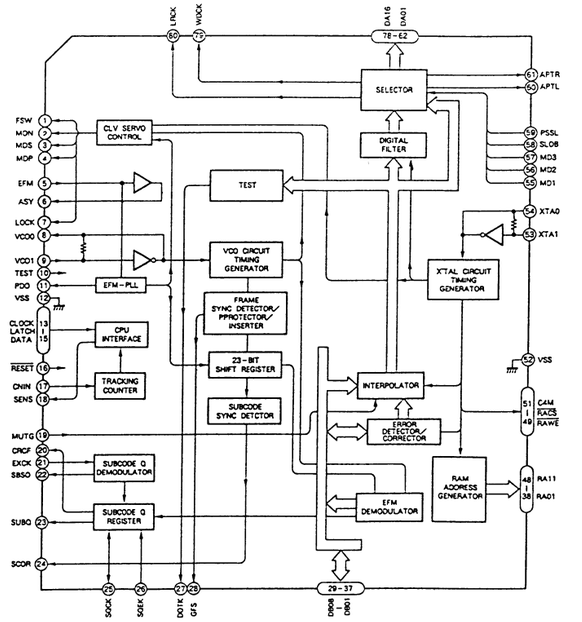

SECTION 5
EXPLODED VIEWS

NOTE :

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)...(RED)
  ↑ ↑
  Parts color Cabinet's color
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

5-1. CABINET SECTION

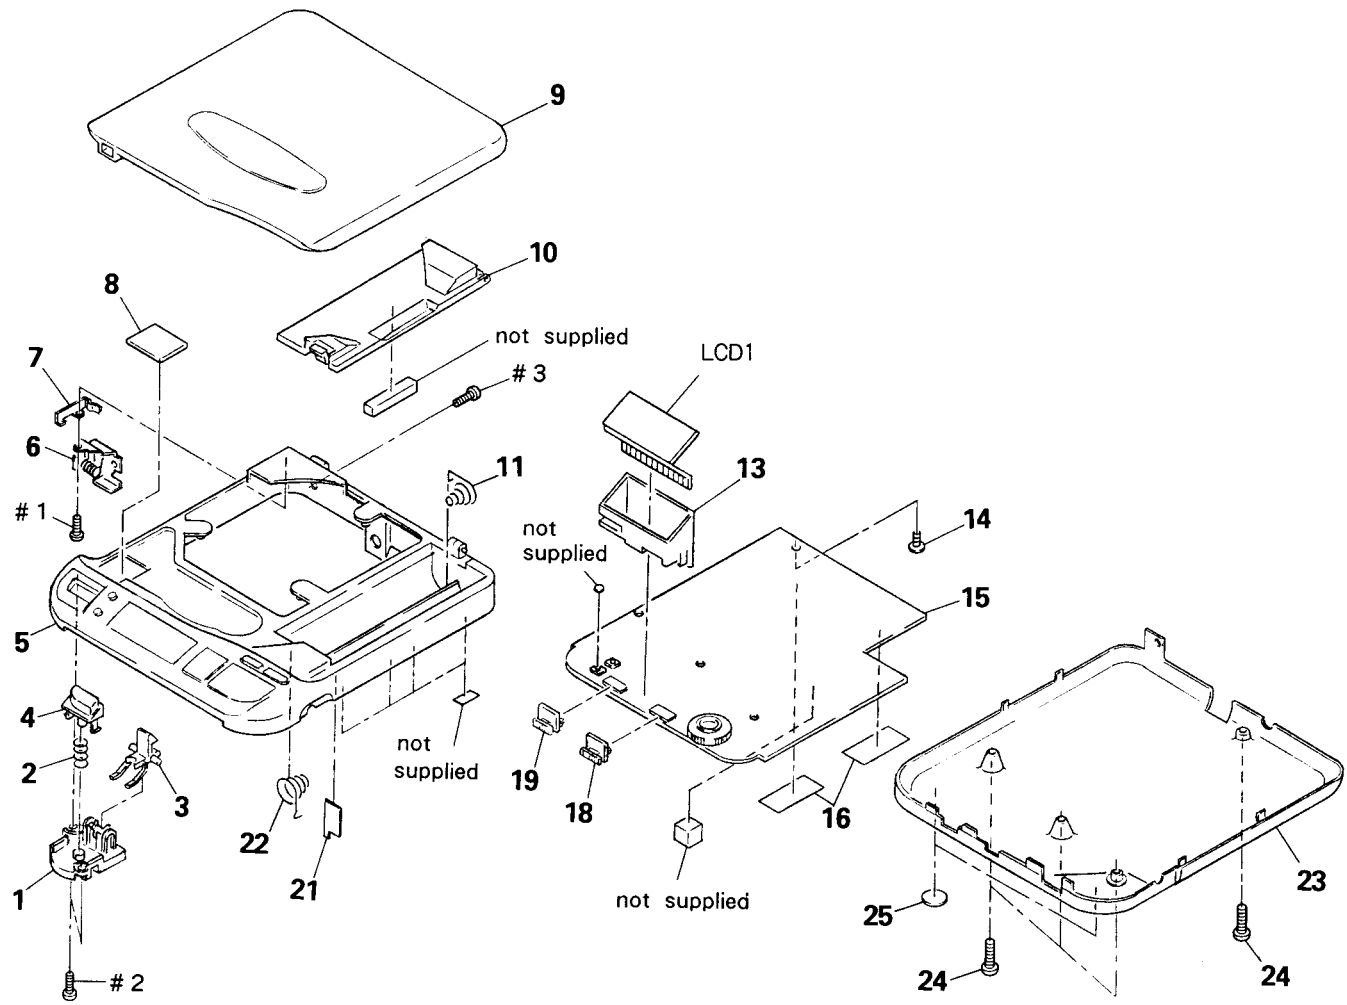

Ref. No.	Part No.	Description	Remarks
1	* 4-945-471-01	BASE, OPEN	
2	4-945-989-01	SPRING(4), COMPRESSION COIL	
3	4-495-474-01	CLAW, LID LOCK (BLK)	
	4-945-474-11	CLAW, LID LOCK (BLU)	
4	4-945-455-01	KNOB (OPEN) (BLK)	
	4-945-455-11	KNOB (OPEN) (BLU)	
5	X-4941-644-1	CABINET ASSY (BLK)	
	X-4941-954-1	CABINET ASSY (BLU)	
6	X-4941-646-1	SPRING ASSY OPEN	
7	4-945-460-01	SPRING (C)	
8	4-945-463-01	SHEET (A)	
9	X-4941-652-1	PANEL ASSY UPPER (BLK)	
	X-4941-956-1	PANEL ASSY UPPER (BLU)	
10	4-945-473-01	LID, BATTERY CASE (BLK)	
	4-945-473-11	LID, BATTERY CASE (BLU)	
11	2-298-630-11	SPRING (R), BATTERY COIL	

Ref. No.	Part No.	Description	Remarks
13	* 4-945-466-01	HOLDER (LCD)	
14	4-947-203-01	SCREW (M2X6), TAPPING	
15	A-3275-095-A	MAIN BOARD, COMPLETE	
16	* 4-926-115-01	CUSHION (P)	
18	4-945-469-01	KNOB (BASS) (BLK)	
	4-945-469-11	KNOB (BASS) (BLU)	
19	4-945-470-01	KNOB (HOLD) (BLK)	
	4-945-470-11	KNOB (HOLD) (BLU)	
21	4-945-462-01	TERMINAL BOARD, BATTERY	
22	4-945-456-01	SPRING (B), BATTERY COIL	
23	X-4941-645-1	PANEL ASSY BOTTOM (BLK)	
	X-4941-957-1	PANEL ASSY BOTTOM (BLU)	
24	3-336-395-01	SCREW (B2X10) (G), TAPPING	
25	4-912-641-01	FOOT, RUBBER	
LCD1	1-109-406-11	DISPLAY PANEL, LIQUID CRYSTAL	

5-2. CHASSIS SECTION

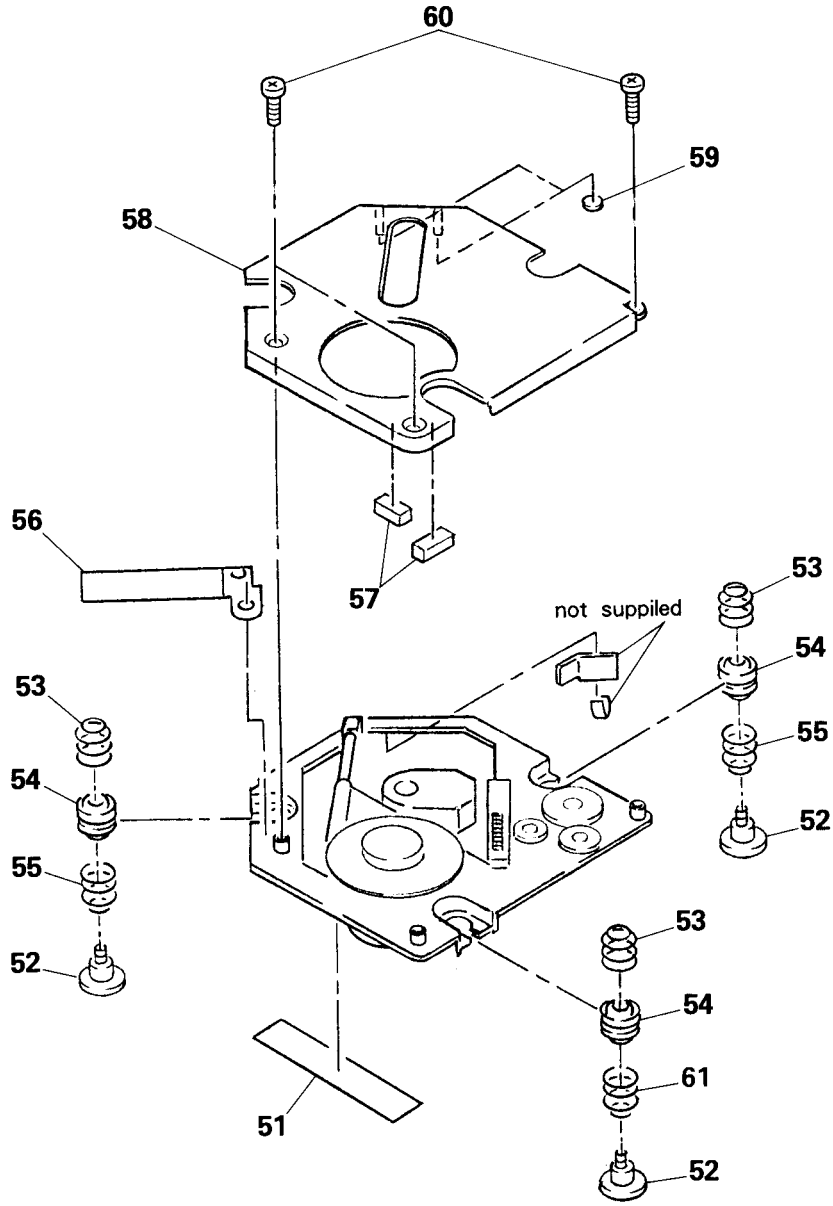

Ref. No.	Part No.	Description	Remarks
51	3-831-441-XX	SHEET, BLIND	
52	4-924-718-01	SCREW, INSULATOR	
53	4-947-040-01	SPRING, COMPRESSION	
54	4-924-705-01	INSULATOR	
55	4-947-040-21	SPRING, COMPRESSION	
56	4-946-959-01	PAPER (B), SHIELD	

Ref. No.	Part No.	Description	Remarks
57	* 3-329-460-01	SPACER	
58	4-924-735-31	COVER, MD	
59	4-917-784-01	SPACER (S)	
60	3-893-942-01	SCREW (1.7X4), TAPPING (B)	
61	4-947-040-11	SPRING, COMPRESSION	

5-3. MECHANISM SECTION (KSM-220ABN)

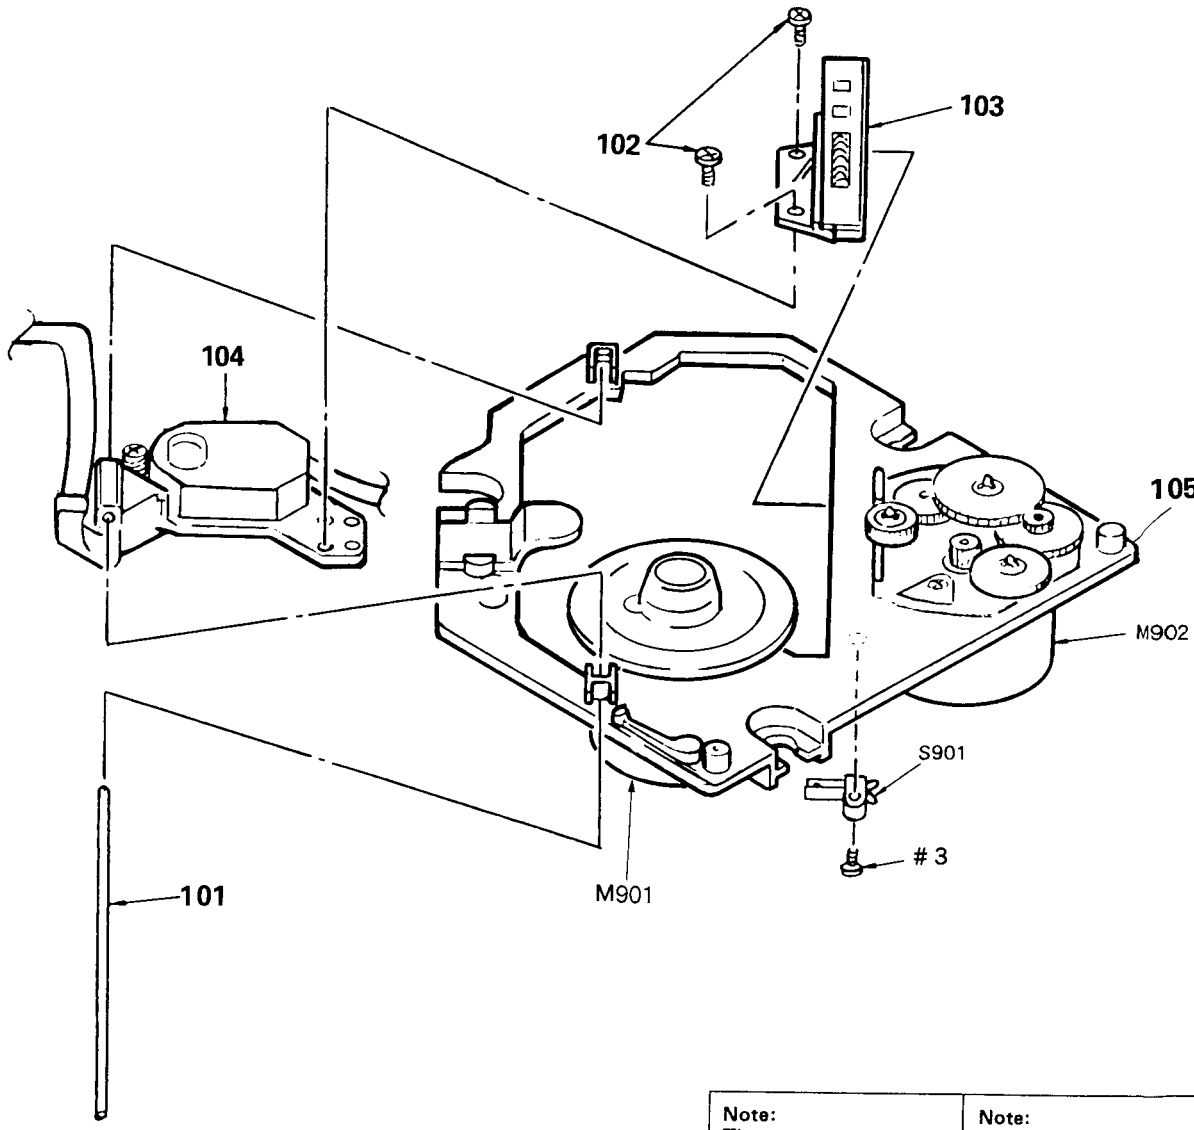

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
101	*	2-641-534-01 SHAFT	
102		2-641-383-01 SCREW (M1.7X4) (NK), TOOTH	
103		X-2641-528-1 RACK ASSY	
104	⚠	8-848-142-11 DEVICE, OPTICAL KSS-220A	
105		X-2625-248-1 CHASSIS ASSY (Including M901, M902)	
S901		1-570-112-11 SWITCH, LEAF (LIMIT)	

MAIN

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spéci-fie.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be defferent from the parts specified in the diagrams or the components used on the set.
- −XX, −X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL : metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F : nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : μ, for example :
  uA... : μA... , uPA... , μPA... , uPB... , μPB... , uPC... , μPC... , uPD..., μPD...
- CAPACITORS :
  uF : μF
- COILS
  uH : μH

Ref. No.	Part No.	Description			Remarks
	A-3275-095-A	MAIN BOARD, COMPLETE			
		**********			
	* 4-945-466-01	HOLDER (LCD)			
		< CAPACITOR >			
C101	1-126-157-11	ELECT	10uF	20% 16V	
C102	1-163-213-00	CERAMIC CHIP	0.0022uF	5% 50V	
C103	1-163-201-00	CERAMIC CHIP	680PF	5% 50V	
C104	1-163-102-00	CERAMIC CHIP	24PF	5% 50V	
C105	1-126-301-11	ELECT	1uF	20% 50V	
C106	1-126-157-11	ELECT	10uF	20% 16V	
C107	1-126-163-11	ELECT	4.7uF	20% 50V	
C108	1-163-986-00	CERAMIC CHIP	0.027uF	10% 25V	
C109	1-126-177-11	ELECT	100uF	20% 10V	
C110	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C111	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C113	1-164-161-11	CERAMIC CHIP	0.0022uF	10% 100V	
C201	1-126-157-11	ELECT	10uF	20% 16V	
C202	1-163-213-00	CERAMIC CHIP	0.0022uF	5% 50V	
C203	1-163-201-00	CERAMIC CHIP	680PF	5% 50V	
C204	1-163-102-00	CERAMIC CHIP	24PF	5% 50V	
C205	1-126-301-11	ELECT	1uF	20% 50V	
C206	1-126-157-11	ELECT	10uF	20% 16V	
C207	1-126-163-11	ELECT	4.7uF	20% 50V	
C208	1-163-986-00	CERAMIC CHIP	0.027uF	10% 25V	
C209	1-126-177-11	ELECT	100uF	20% 10V	
C210	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C211	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C213	1-164-161-11	CERAMIC CHIP	0.0022uF	10% 100V	
C301	1-163-095-00	CERAMIC CHIP	12PF	5% 50V	

Ref. No.	Part No.	Description			Remarks
C302	1-163-095-00	CERAMIC CHIP	12PF	5% 50V	
C303	1-163-105-00	CERAMIC CHIP	33PF	5% 50V	
C304	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V	
C305	1-162-638-11	CERAMIC CHIP	1uF	16V	
C306	1-124-229-00	ELECT	33uF	20% 10V	
C307	1-124-229-00	ELECT	33uF	20% 10V	
C308	1-126-177-11	ELECT	100uF	20% 10V	
C309	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C310	1-126-177-11	ELECT	100uF	20% 10V	
C311	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C312	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C313	1-124-229-00	ELECT	33uF	20% 10V	
C314	1-124-638-11	ELECT	22uF	20% 10V	
C315	1-126-163-11	ELECT	4.7uF	20% 50V	
C316	1-124-464-11	ELECT	0.22uF	20% 50V	
C317	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C318	1-126-163-11	ELECT	4.7uF	20% 50V	
C319	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C320	1-124-464-11	ELECT	0.22uF	20% 50V	
C321	1-124-638-11	ELECT	22uF	20% 10V	
C322	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C323	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C324	1-163-007-11	CERAMIC CHIP	680PF	10% 50V	
C330	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V	
C340	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C401	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C402	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C403	1-126-357-11	ELECT	150uF	20% 16V	
C406	1-124-584-00	ELECT	100uF	20% 10V	
C411	1-126-157-11	ELECT	10uF	20% 16V	

MAIN

Ref. No.	Part No.	Description			Remarks
C412	1-126-163-11	ELECT	4.7uF	20% 50V	
C414	1-126-157-11	ELECT	10uF	20% 16V	
C430	1-135-149-21	TANTALUM CHIP	2.2uF	20% 10V	
C450	1-124-257-00	ELECT	2.2uF	20% 50V	
C451	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V	
C501	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C502	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C503	1-124-431-00	ELECT	33uF	20% 4V	
C505	1-163-078-11	CERAMIC CHIP	0.033uF	10% 25V	
C506	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C507	1-135-070-00	TANTALUM CHIP	0.1uF	10% 35V	
C508	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C509	1-124-431-00	ELECT	33uF	20% 4V	
C510	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C511	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C512	1-124-584-00	ELECT	100uF	20% 10V	
C513	1-124-431-00	ELECT	33uF	20% 4V	
C514	1-163-095-00	CERAMIC CHIP	12PF	5% 50V	
C515	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C516	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C517	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C518	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C519	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C520	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V	
C521	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C522	1-124-239-00	ELECT	6.9uF	20% 10V	
C523	1-124-239-00	ELECT	6.9uF	20% 10V	
C524	1-124-638-11	ELECT	22uF	20% 10V	
C525	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C526	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C527	1-164-222-11	CERAMIC CHIP	0.22uF	25V	
C528	1-124-638-11	ELECT	22uF	20% 10V	
C529	1-163-125-00	CERAMIC CHIP	220PF	5% 50V	
C531	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C532	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C533	1-162-638-11	CERAMIC CHIP	1uF	16V	
C534	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C535	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V	
C536	1-163-989-11	CERAMIC CHIP	0.033uF	10% 25V	
C537	1-135-145-11	TANTALUM CHIP	0.47uF	10% 25V	
C538	1-124-434-00	ELECT	220uF	20% 4V	
C539	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V	
C540	1-162-637-11	CERAMIC CHIP	0.47uF	16V	
C543	1-135-148-21	TANTAL. CHIP	1.5uF	10% 16V	
C544	1-135-159-21	TANTALUM CHIP	10uF	10% 16V	

Ref. No.	Part No.	Description			Remarks
C546	1-163-986-00	CERAMIC CHIP	0.027uF	10% 25V	
C547	1-162-638-11	CERAMIC CHIP	1uF	16V	
C548	1-126-162-11	ELECT	3.3uF	20% 50V	
C549	1-126-157-11	ELECT	10uF	20% 16V	
C550	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C551	1-126-157-11	ELECT	10uF	20% 16V	
C552	1-126-160-11	ELECT	1uF	20% 50V	
C553	1-162-638-11	CERAMIC CHIP	1uF	16V	
C554	1-162-637-11	CERAMIC CHIP	0.47uF	16V	
C555	1-163-081-00	CERAMIC CHIP	0.22uF	25V	
C556	1-163-010-11	CERAMIC CHIP	0.0012uF	10% 50V	
C557	1-163-017-00	CERAMIC CHIP	0.0047uF	5% 50V	
C558	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C559	1-124-584-00	ELECT	100uF	20% 10V	
C561	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C562	1-162-638-11	CERAMIC CHIP	1uF	16V	
C601	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C604	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C605	1-162-638-11	CERAMIC CHIP	1uF	16V	
C606	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C607	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V	
C608	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C609	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	
C803	1-124-257-00	ELECT	2.2uF	20% 50V	
C804	1-124-257-00	ELECT	2.2uF	20% 50V	
C807	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C808	1-162-638-11	CERAMIC CHIP	1uF	16V	
C809	1-124-239-00	ELECT	6.8uF	20% 25V	
C810	1-162-638-11	CERAMIC CHIP	1uF	16V	
C811	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C812	1-164-222-11	CERAMIC CHIP	0.22uF	25V	
C830	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V	

< CONNECTOR >

CN501	1-566-976-11	SOCKET, CONNECTOR 12P
CN502	1-565-309-21	CONNECTOR, FLEXIBLE 4P
CNJ401	1-580-428-11	JACK, DC (DC IN 9V)

< DIODE >

D401	8-719-200-36	DIODE E10QS04
D402	8-719-106-22	DIODE RD7.5M-B1
D405	8-719-105-82	DIODE RD5.1M-B2
D409	8-719-975-40	DIODE RB411D
D501	8-719-938-72	DIODE SB01-05CP

Ref. No.	Part No.	Description	Remarks
D502	8-719-938-72	DIODE SB01-05CP	
D503	8-719-938-72	DIODE SB01-05CP	
D504	8-719-106-52	DIODE RD10M-B1	
D505	8-719-400-18	DIODE MA152WK	
D507	8-719-400-18	DIODE MA152WK	
D601	8-719-400-18	DIODE MA152WK	
D801	8-719-951-22	DIODE 1MN10	
D804	8-719-400-18	DIODE MA152WK	
D805	8-719-400-18	DIODE MA152WK	
D806	8-719-938-72	DIODE SB01-05CP	
		< IC >	
IC301	8-759-501-31	IC SM5840CS	
IC302	8-759-148-30	IC uPD6376	
IC303	8-759-710-55	IC NJM2100M	
IC304	8-759-991-27	IC BA3570F	
IC501	8-752-033-55	IC CXA1271Q	
IC502	8-752-033-54	IC CXA1272Q	
IC503	8-759-970-89	IC BA10358F	
IC504	8-759-030-17	IC MPC1715FU	
IC505	8-759-031-84	IC SC7S04F	
IC601	8-752-328-46	IC CXD1130Q	
IC602	8-759-805-49	IC CXK5816MS-15L	
IC801	8-752-831-23	IC CXP5084-640Q	
IC802	8-759-982-73	IC BA10393F	
		< JACK >	
J301	1-580-709-11	JACK (LINE OUT)	
J302	1-580-709-21	JACK (HEADPHONES)	
		< JUMPER >	
JR401	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR402	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR403	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR404	1-216-295-00	METAL CHIP 0 5% 1/10W	
		< COIL >	
L402	1-412-032-11	INDUCTOR, CHIP 100uH	
L403	1-412-031-11	INDUCTOR, CHIP 47uH	
L501	1-412-029-11	INDUCTOR, CHIP 10uH	
L502	1-408-421-00	INDUCTOR 100uH	
L503	1-412-032-11	INDUCTOR, CHIP 100uH	
L504	1-412-032-11	INDUCTOR, CHIP 100uH	
L505	1-408-421-00	INDUCTOR 100uH	
L506	1-412-029-11	INDUCTOR, CHIP 10uH	

Ref. No.	Part No.	Description	Remarks
		< LCD >	
LCD1	1-809-406-11	DISPLAY PANEL, LIQUID CRYSTAL	
		< TRANSISTOR >	
Q101	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q102	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q201	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q202	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q409	8-729-216-22	TRANSISTOR 2SA1162-G	
Q410	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q412	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q413	8-729-806-75	TRANSISTOR 2SB1120	
Q414	8-729-903-10	TRANSISTOR FMW1	
Q423	8-729-901-04	TRANSISTOR DTA114EK	
Q424	8-729-903-10	TRANSISTOR FMW1	
Q425	8-729-900-53	TRANSISTOR DTC114EK	
Q426	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q451	8-729-922-34	TRANSISTOR 2SD1758F5-QR	
Q453	8-729-140-75	TRANSISTOR 2SD999-CLCK	
Q501	8-729-216-22	TRANSISTOR 2SA1162-G	
Q502	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q503	8-729-902-XX	TRANSISTOR DTC114TK	
Q504	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q506	8-729-903-29	TRANSISTOR DTA144TK	
Q507	8-729-903-30	TRANSISTOR DTC144TK	
Q801	8-729-901-05	TRANSISTOR DTA124EK	
Q802	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q803	8-729-901-04	TRANSISTOR DTA114EK	
Q805	8-729-900-53	TRANSISTOR DTC114EK	
Q807	8-729-216-22	TRANSISTOR 2SA1162-G	
		< RESISTOR >	
R101	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R102	1-216-686-11	METAL CHIP 30K 0.5% 1/10W	
R103	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	
R104	1-216-695-11	METAL CHIP 68K 0.5% 1/10W	
R105	1-216-105-00	METAL CHIP 220K 5% 1/10W	
R106	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R107	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R108	1-216-033-00	METAL CHIP 220 5% 1/10W	
R109	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
R110	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	

MAIN

Ref. No.	Part No.	Description			Remarks
R111	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R112	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R113	1-216-009-00	METAL CHIP	22	5% 1/10W	
R122	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R123	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R201	1-216-668-11	METAL CHIP	5.1K	0.5% 1/10W	
R202	1-216-686-11	METAL CHIP	30K	0.5% 1/10W	
R203	1-216-689-11	METAL CHIP	39K	0.5% 1/10W	
R204	1-216-695-11	METAL CHIP	68K	0.5% 1/10W	
R205	1-216-105-00	METAL CHIP	220K	5% 1/10W	
R206	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R207	1-216-053-00	METAL CHIP	1.5K	5% 1/10W	
R208	1-216-033-00	METAL CHIP	220	5% 1/10W	
R209	1-216-071-00	METAL CHIP	8.2K	5% 1/10W	
R210	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R211	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R212	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R213	1-216-009-00	METAL CHIP	22	5% 1/10W	
R222	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R223	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R301	1-216-121-00	METAL CHIP	1M	5% 1/10W	
R302	1-216-001-00	METAL CHIP	10	5% 1/10W	
R303	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R304	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R305	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R306	1-216-051-00	METAL CHIP	1.2K	5% 1/10W	
R307	1-216-121-00	METAL CHIP	1M	5% 1/10W	
R308	1-216-007-00	METAL CHIP	18	5% 1/10W	
R310	1-216-001-00	METAL CHIP	10	5% 1/10W	
R330	1-216-298-00	METAL CHIP	2.2	5% 1/10W	
R419	1-216-045-00	METAL CHIP	680	5% 1/10W	
R420	1-216-041-00	METAL CHIP	470	5% 1/10W	
R421	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R422	1-216-069-00	METAL CHIP	6.8K	5% 1/10W	
R423	1-216-045-00	METAL CHIP	680	5% 1/10W	
R424	1-216-081-00	METAL CHIP	22K	5% 1/10W	
R425	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R426	1-216-033-00	METAL CHIP	220	5% 1/10W	
R427	1-216-659-11	METAL CHIP	2.2K	0.5% 1/10W	
R428	1-216-663-11	METAL CHIP	3.3K	0.5% 1/10W	
R429	1-216-697-11	METAL CHIP	82K	0.5% 1/10W	
R430	1-216-663-11	METAL CHIP	3.3K	0.5% 1/10W	
R431	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R432	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R433	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R436	1-216-025-00	METAL CHIP	100	5% 1/10W	
R437	1-216-686-11	METAL CHIP	30K	0.5% 1/10W	
R438	1-216-053-00	METAL CHIP	1.5K	5% 1/10W	
R439	1-216-694-11	METAL CHIP	62K	0.5% 1/10W	
R440	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R441	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R446	1-216-009-00	METAL CHIP	22	5% 1/10W	
R448	1-216-041-00	METAL CHIP	470	5% 1/10W	
R480	1-216-174-00	METAL GLAZE	100	5% 1/8W	
R481	1-216-174-00	METAL GLAZE	100	5% 1/8W	
R501	1-216-029-00	METAL CHIP	150	5% 1/10W	
R502	1-216-069-00	METAL CHIP	6.8K	5% 1/10W	
R503	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R504	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R505	1-216-105-00	METAL CHIP	220K	5% 1/10W	
R506	1-216-081-00	METAL CHIP	22K	5% 1/10W	
R508	1-216-069-00	METAL CHIP	6.8K	5% 1/10W	
R509	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R510	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R511	1-216-150-00	METAL GLAZE	10	5% 1/8W	
R512	1-216-085-00	METAL CHIP	33K	5% 1/10W	
R513	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R514	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R515	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R516	1-216-129-00	METAL CHIP	2.2M	5% 1/10W	
R517	1-216-093-00	METAL CHIP	68K	5% 1/10W	
R518	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R519	1-216-119-00	METAL CHIP	820K	5% 1/10W	
R520	1-216-748-11	METAL CHIP	39K	5% 1/10W	
R521	1-216-095-00	METAL CHIP	82K	5% 1/10W	
R522	1-216-081-00	METAL CHIP	22K	5% 1/10W	
R523	1-216-059-00	METAL CHIP	2.7K	5% 1/10W	
R524	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R525	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R526	1-216-114-00	METAL GLAZE	510K	5% 1/10W	
R528	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R529	1-216-686-11	METAL CHIP	30K	0.5% 1/10W	
R530	1-216-686-11	METAL CHIP	30K	0.5% 1/10W	
R531	1-216-059-00	METAL CHIP	2.7K	5% 1/10W	
R532	1-216-103-00	METAL CHIP	180K	5% 1/10W	
R533	1-216-062-00	METAL CHIP	3.6K	5% 1/10W	
R534	1-216-121-00	METAL CHIP	1M	5% 1/10W	
R536	1-216-099-00	METAL CHIP	120K	5% 1/10W	
R537	1-216-083-00	METAL CHIP	27K	5% 1/10W	
R538	1-216-094-00	METAL GLAZE	75K	5% 1/10W	

Ref. No.	Part No.	Description			Remarks
R539	1-216-094-00	METAL GLAZE	75K	5% 1/10W	
R540	1-216-086-00	METAL GLAZE	36K	5% 1/10W	
R543	1-216-302-00	METAL CHIP	2.7	5% 1/10W	
R544	1-216-226-00	METAL GLAZE	15K	5% 1/8W	
R545	1-216-113-00	METAL CHIP	470K	5% 1/10W	
R546	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R547	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R548	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R549	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R550	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R551	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R552	1-216-081-00	METAL CHIP	22K	5% 1/10W	
R553	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R554	1-216-033-00	METAL CHIP	220	5% 1/10W	
R555	1-216-081-00	METAL CHIP	22K	5% 1/10W	
R556	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R557	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R558	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R559	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R560	1-216-129-00	METAL CHIP	2.2M	5% 1/10W	
R561	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R562	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R563	1-216-111-00	METAL CHIP	390K	5% 1/10W	
R564	1-216-025-00	METAL CHIP	100	5% 1/10W	
R565	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R566	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R601	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R602	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R801	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R802	1-216-238-00	METAL GLAZE	47K	5% 1/8W	
R806	1-216-089-00	METAL CHIP	47K	5% 1/10W	
R807	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R808	1-216-047-00	METAL CHIP	820	5% 1/10W	
R809	1-216-059-00	METAL CHIP	2.7K	5% 1/10W	
R810	1-216-070-00	METAL CHIP	7.5K	5% 1/10W	
R811	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R812	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R813	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R818	1-216-101-00	METAL CHIP	150K	5% 1/10W	
R821	1-216-113-00	METAL CHIP	470K	5% 1/10W	

Ref. No.	Part No.	Description	Remarks
		< VARIABLE RESISTOR >	
RV301	1-238-072-31	RES, VAR, CARBON 10K/10K (VOLUME)	
RV401	1-238-599-11	RES, ADJ, CARBON 4.7K	
RV501	1-238-602-11	RES, ADJ, CARBON 47K	
RV502	1-238-602-11	RES, ADJ, CARBON 47K	
RV503	1-238-601-11	RES, ADJ, CARBON 22K	
RV504	1-238-602-11	RES, ADJ, CARBON 47K	
RV505	1-238-597-11	RES, ADJ, CARBON 1K	
		< SWITCH >	
S402	1-571-506-41	SWITCH, SLIDE (BASS BOOST)	
S801	1-571-276-21	SWITCH, LEAF (OPEN SW)	
S802	1-571-506-41	SWITCH, SLIDE (HOLD/RESUME)	
S803	1-572-198-11	SWITCH, KEYBOARD (PLAY MODE)	
S804	1-572-198-11	SWITCH, KEYBOARD (▶II)	
S805	1-572-198-11	SWITCH, KEYBOARD (STOP)	
S806	1-572-198-11	SWITCH, KEYBOARD (⏮)	
S807	1-572-198-11	SWITCH, KEYBOARD (⏭)	
S808	1-572-198-11	SWITCH, KEYBOARD (REPEAT/ENTER)	
		< CRYSTAL >	
X301	1-567-908-11	VIBRATOR, CRYSTAL 16.9344MHz	
X801	1-578-773-11	VIBRATOR, CERAMIC 3.58MHz	
		**********	
		MISCELLANEOUS	
		**********	
104	⚠8-848-142-11	DEVICE, OPTICAL KSS-220A	
S901	1-570-112-11	SWITCH, LEAF (LIMIT)	
		**********	
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-465-609-11	ADAPTOR, AC (AC-96NA) (US)	
	1-465-665-11	ADAPTOR, AC (AC-96N(AU)) (Australian)	
	1-465-667-11	ADAPTOR, AC (AC-96N(CA)) (Canadian)	
	1-465-669-11	ADAPTOR, AC (AC-96N) (E)	
	1-465-817-21	ADAPTOR, AC (AC-96NES) (AEP)	
	1-555-658-21	CORD, CONNECTION	
	1-569-007-11	ADAPTER, CONVERSION 2P (E)	
	1-575-145-11	CORD, CONNECTION	
	1-590-038-11	CORD, CONNECTION	
	3-701-618-00	BAG, POLYETHYLENE	

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
	3-752-086-01	INSTRUCTION	
	3-753-647-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH) (Canadian, AEP, E)	
	3-753-647-21	MANUAL, INSTRUCTION (ENGLISH) (US, Australian)	
	3-753-647-41	MANUAL, INSTRUCTION (DUTCH, SWEDISH, PORTUGUESE) (AEP)	
	3-753-647-51	MANUAL, INSTRUCTION (GERMAN, ITALIAN) (AEP)	
*	4-926-687-01	CUSHION (UPPER)	
*	4-945-319-01	INDIVIDUAL CARTON (US, Canadian, E)	
*	4-945-322-01	INDIVIDUAL CARTON (AEP, Australian)	
*	4-945-326-01	CUSHION (LOWER) (US, Canadian, E)	
*	4-945-327-01	CUSHION (LOWER) (AEP, Australian)	
	8-953-307-90	HEADPHONE MDR-A10D SET (US, AEP)	
	8-953-400-90	HEADPHONE MDR-E552//K SET (Canadian, E, Australian)	

****

HARDWARE LIST

****

#1	7-685-102-19	SCREW +P 2X4 NON-SLIT TYPE 2
#2	7-685-103-19	SCREW +P 2X5 NON-SLIT TYPE 2
#3	7-627-552-78	SCREW, PRECISION +P 1.7X3.5
#4	7-627-552-88	SCREW, PRECISION +P 1.7X2.2

9-956-501-11

Sony Corporation
General Audio Group

English
91 G1696-1
Printed in Japan
©1991.7
Published by Customer Relations and Service Group

SRS-58

SERVICE MANUAL

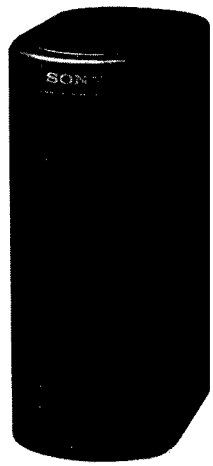

US Model
AEP Model
UK Model
E Model
Tourist Model

SPECIFICATIONS

Power output	3 W + 3 W with the internal batteries
Input	Speaker cord equipped with stereo miniplug (1.5 m)
Input impedance	150 ohms (with the POWER switch set to ON)
Output	Minijack
Speaker section	
System	Full-range, bass-reflex enclosure type
Speaker unit	Full range (magnetically shielded): 65 mm (2 5/8 in.) dia.
Impedance	4 ohms
Rated input power	5 W (with the POWER switch set to OFF/DIRECT)
General	
Power requirements	
External power requirements	DC IN 6 V jack accepts the supplied Sony AC power adaptor.
Internal power requirements	DC 6 V, four size C (R14) batteries per speaker
Battery life (at 10 mW + 10 mW output)	Approx. 60 hours with Sony batteries SUM-2 (NS) Approx. 120 hours with Sony alkaline batteries AM2 (N)
Dimensions	Approx. 77 × 180 × 127 mm (w/h/d) (3 1/8 × 7 1/8 × 5 in.) incl. projecting parts and controls
Weight	Approx. 700 g (24.7 oz.) per speaker, not incl. batteries or other accessories
Supplied accessories	
	AC power adaptor (1) Rubber cushions (4)
Optional accessories	
	Connecting cord RK-G138 Plug adaptor PC-236MS, PC-234S

Design and specifications subject to change without notice.

MICROFILM

STEREO ACTIVE SPEAKER SYSTEM

SONY®

Power Requirements

The power source is required when the unit is used with the POWER switch set to ON (the built-in power amplifier is in operation).

Using on House Current

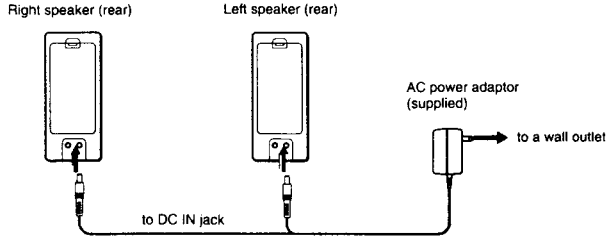

- When the AC power adaptor is connected to the unit, internal batteries are automatically disconnected.
- Set the POWER switches of both speakers to ON when using on house current. If you turn on only one speaker, you may hear some noise.

Note on the AC power adaptor
Use only the supplied AC power adaptor. Do not use any other AC power adaptor.

Polarity of the plug

Using on Batteries (not supplied)

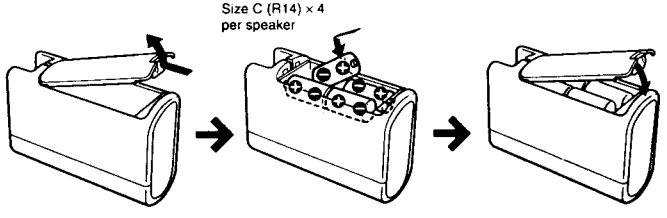

Battery replacement
When the batteries are weak, the POWER indicator will glow faintly and the sound will become distorted or unstable. In this case, replace all the batteries with new ones. For battery life, see "Specifications".

Connections

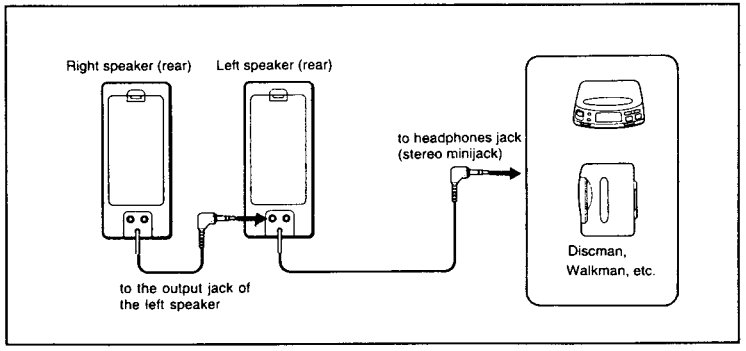
Right speaker (rear)
Left speaker (rear)
to headphones jack (stereo minijack)
Discman, Walkman, etc.
to the output jack of the left speaker

- The sound of the left channel is heard from the speaker connected to the sound source. Be sure to place it on the left.
- No signal is output from the output jack of the right speaker.

Connection to a stereo phone-type headphones jack
Use the optional PC-234S plug adaptor or RK-G138 connecting cord.

For Stability of the Speaker Unit

Attach the supplied rubber cushions on the bottom.

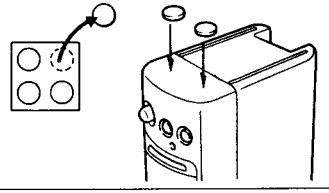

When Carrying the Speakers

Be sure to insert the speaker cord plug into the jack. Otherwise, the plug may contact metallic objects, and the power may turn on automatically, causing the internal batteries being exhausted.

This section is extracted from instruction manual.

Operation

Using the Built-in Amplifier

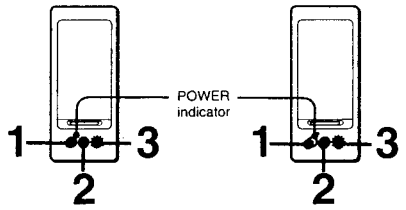

1 Depress the POWER switch on each speaker to ON.

2 Depress the DES switch on each speaker to ON or OFF.
On usual use, keep the DES switches in the ON position. You can enjoy powerful bass and clear treble.

3 Adjust the volume with the VOLUME control on each speaker.
When a signal is supplied, the power will be turned on automatically and the POWER indicator will light up.

When the unit is not used for a long period of time
Keep the POWER switches in the OFF/DIRECT position.

Using Without the Built-in Amplifier

Power sources are not required.
Keep the POWER switches in the OFF/DIRECT position. In this case, the VOLUME controls and the DES switches (DES circuit) do not operate. Adjust the volume on the connected equipment.

To Adjust the Volume

Before playing the connected equipment, set the VOLUME controls on the speakers to MAX, then set the volume control on the connected equipment to a medium position. Start playing the connected equipment and adjust the volume to your preference: use the VOLUME controls on the speakers to turn down the volume, or use the volume control on the connected equipment to turn up the volume.

Power On/Off System of the Built-in Amplifier

When a signal is input, the built-in amplifier automatically turns on and the POWER indicator lights up.
When no signal is supplied, the POWER indicator goes out and the built-in power amplifier turns off automatically about one minute later.

When a signal is interrupted or extremely low sound continues for more than a minute
The power of the speaker system may turn off. To ensure correct operation, increase the volume on the connected equipment so that the POWER indicator lights up.
To lower the volume, be sure to use the VOLUME controls of the speaker system.

For powerful bass and clear treble
While keeping the DES switches in the ON position, DES circuit works and enable you to obtain powerful bass and clear treble regardless of your volume setting.
When you turn up the volume near to "MAX", low sound distortion may occur. In this case, set the DES switches to the OFF position.

Features

The Sony SRS-58 is a compact-sized speaker system with a built-in power amplifier. It can be connected to a Discman, Walkman*, etc.
- DES (Dynamic Equalizing Sound) circuit enables you to obtain powerful bass and clear treble regardless of the volume setting.
- The "dynamic sound duct" assures a rich and powerful bass.
- The magnetically shielded unit has little effect on a TV screen or recorded tapes, etc. placed near the unit.
- The built-in automatic power on/off system avoids unnecessary power consumption.

* Walkman is a trademark of Sony Corporation.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Precautions

- Operate the unit only on 6 V DC. For AC operation, use the supplied AC power adaptor. Do not use any other power adaptor.
- If the unit is not to be used for a long period of time or is to be operated extensively on AC power, remove the batteries to avoid damage from battery leakage and corrosion.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries and have the unit checked by qualified personnel before operating it any further.
- Do not use alcohol, benzine or thinner to clean the cabinet.
- Although this speaker system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards or floppydisks using magnetic coding in front of the unit for an extended period of time for precaution.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult the nearest Sony dealer.

If the TV picture is magnetically distorted

Although this speaker system is magnetically shielded, the picture on some TV sets may be magnetically distorted. **In such a case,** turn off the power of the TV set once, and after 15 to 30 minutes turn it on again.
When a sign of improvement does not appear, locate the speakers away from the TV set. Furthermore, be sure not to place things in which the magnets are attached or used, such as audio racks, TV stands, toys. These may cause magnetical distortion in the picture due to their interaction with the speaker.

SECTION 2
DIAGRAMS

2-1. PRINTED WIRING BOARD

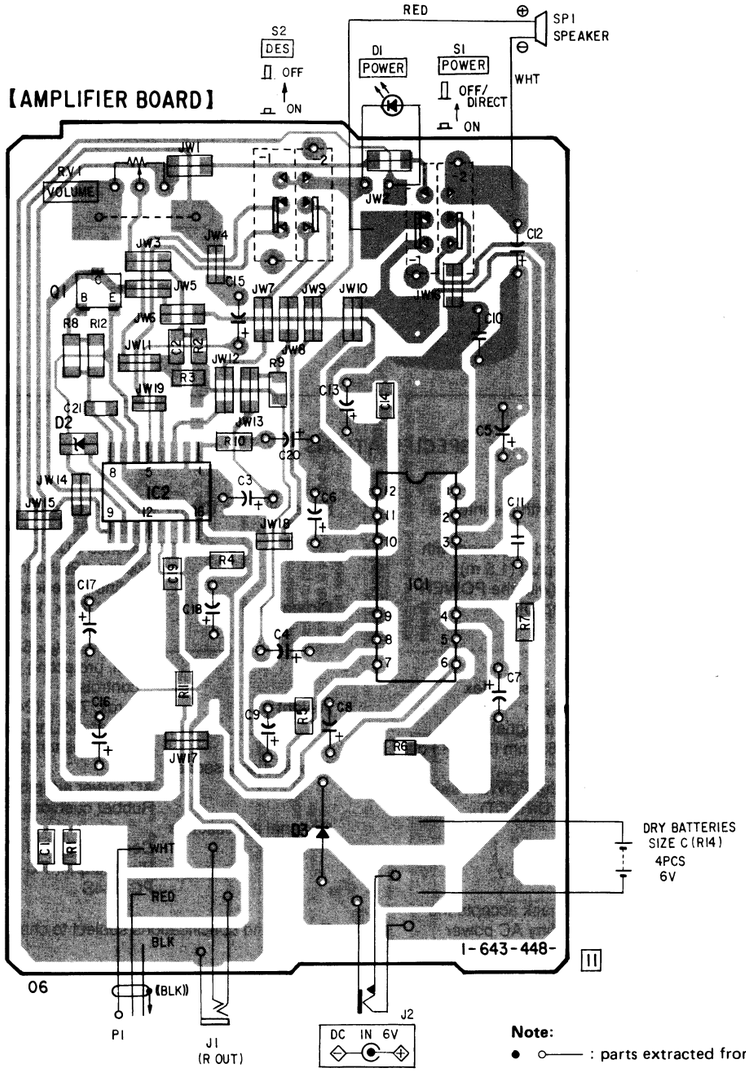

Note:

- ○—— : parts extracted from the component side.

2-2. SEMICONDUCTOR LEAD LAYOUTS

LA4555



1SR139-100



HLMP-1801



2-3. SCHEMATIC DIAGRAM

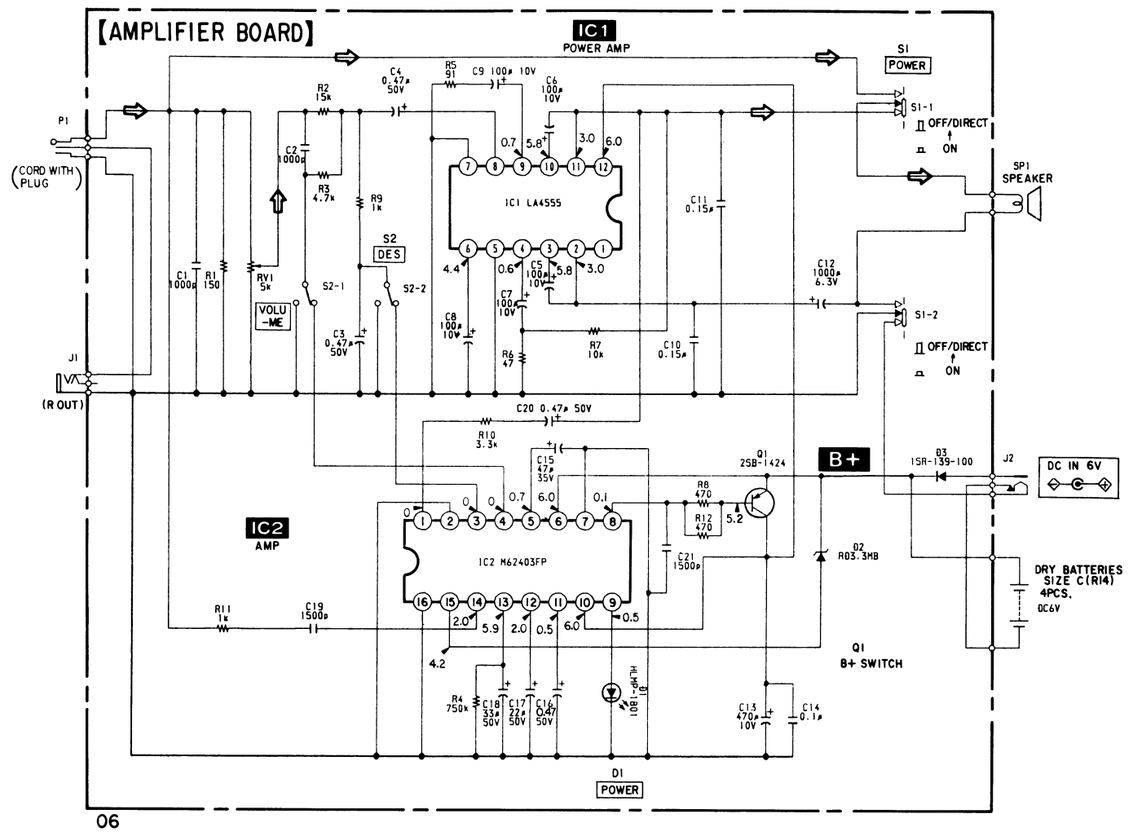

2-4. IC BLOCK DIAGRAM

IC1 LA4555

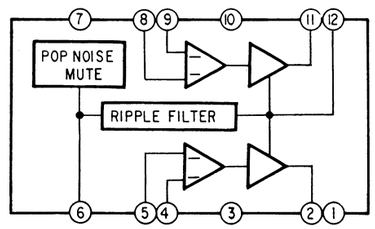

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- B+ : B+ line.
- Power voltage is dc 6V and fed with regulated dc power supply from battery terminal.
  no mark: Power on.
- Voltages are taken with a VOM. (Input impedance 10MΩ) Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : Signal line

2-3. SCHEMATIC DIAGRAM

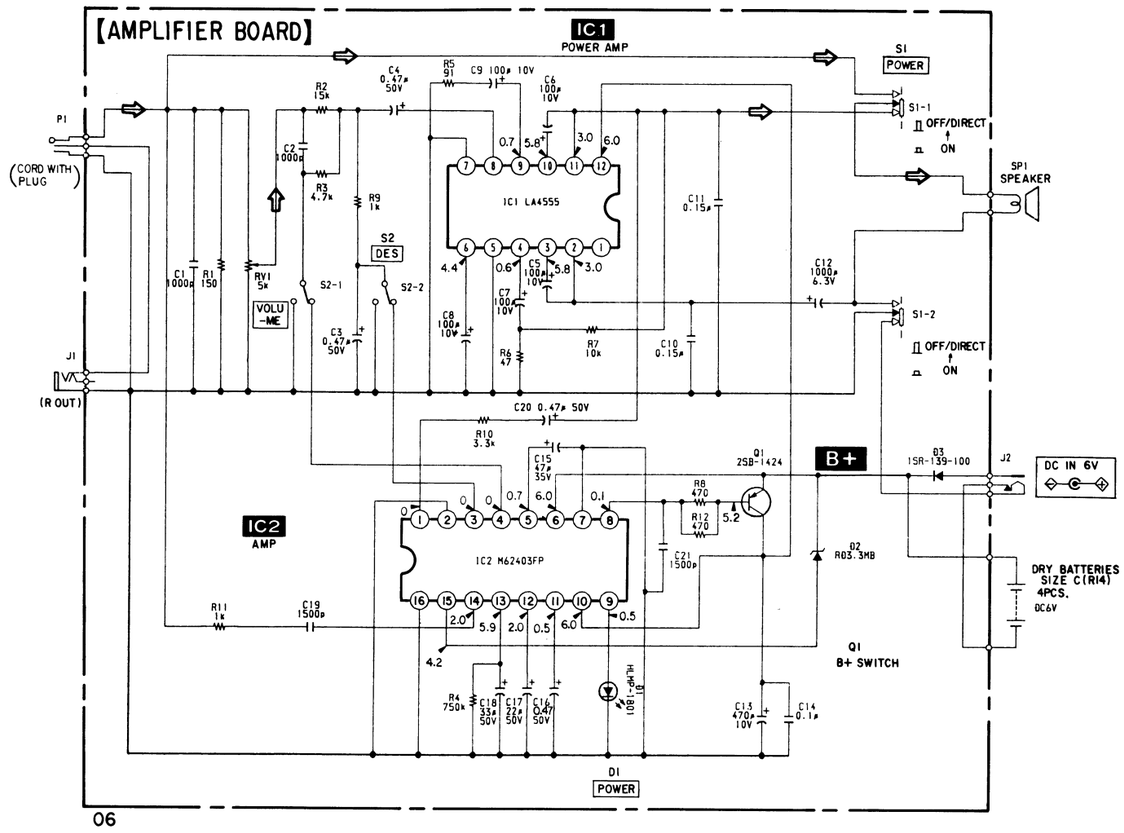

06

2-4. IC BLOCK DIAGRAM

IC1 LA4555

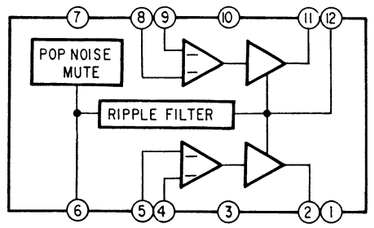

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- **B+** : B+ line.
- Power voltage is dc 6V and fed with regulated dc power supply from battery terminal.
  no mark: Power on.
- Voltages are taken with a VOM. (Input impedance 10MΩ) Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : Signal line

SECTION 3 EXPLODED VIEW

NOTE:

- –XX, –X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
  Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ Parts color ↑ Cabinet's color
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.
- Abbreviation
  JE: Tourist model

3-1. GENERAL SECTION

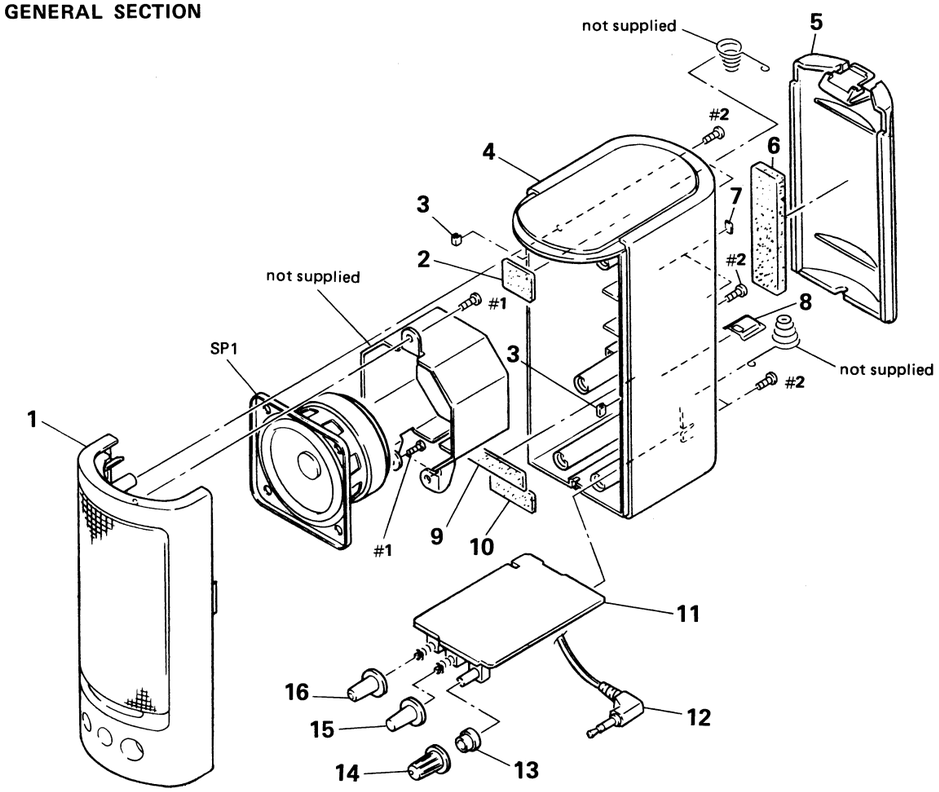

Ref. No.	Part No.	Description	Remark
1	X-4942-326-1	PANEL ASSY, FRONT (BLACK) (US, AEP, UK, E, JE)	
1	X-4942-327-1	PANEL ASSY, FRONT (SILVER) (AEP, E)	
* 2	4-951-131-01	SHEET (1), BLIND	
3	3-831-441-11	CUSHION, CABINET UPPER 10X7X0.5	
4	4-950-105-01	CABINET, REAR (BLACK) (US, AEP, UK, E, JE)	
4	4-950-105-11	CABINET, REAR (SILVER) (AEP, E)	
5	4-950-081-01	LID, BATTERY CASE (BLACK) (US, AEP, UK, E, JE)	
5	4-950-081-11	LID, BATTERY CASE (SILVER) (AEP, E)	
6	9-911-815-03	CUSHION (BATTERY)	
7	9-911-850-XX	CUSHION (BATTERY CASE LID)	
8	3-894-933-01	TERMINAL, + BATTERY	
* 9	4-951-132-01	SHEET (2), BLIND	
* 10	4-951-133-01	SHEET (3), BLIND	
* 11	A-4542-086-A	AMPLIFIER BOARD, COMPLETE	
12	1-559-892-11	CORD (WITH PLUG)	
13	2-141-216-01	SPACER (VOL)	
14	4-950-077-01	KNOB, VOLUME (US, AEP, UK, E, JE)	
14	4-950-077-11	KNOB, VOLUME (AEP, E)	
15	4-950-078-01	BUTTON (PUSH) (BLACK) (US, AEP, UK, E, JE)	
15	4-950-078-41	BUTTON (PUSH) (SILVER) (AEP, E)	
16	4-950-078-11	BUTTON (PUSH) (BLACK) (US, AEP, UK, E, JE)	
16	4-950-078-31	BUTTON (PUSH) (SILVER) (AEP, E)	
SP1	1-544-620-11	SPEAKER	

AMPLIFIER

SECTION 4
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- –XX, –X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA..., uPA...: μPA...,
  uPB...: μPB..., uPC...: μPC...,
  uPD...: μPD...
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board name.

- Abbreviation
  JE: Tourist model

Ref.No.	Part No.	Description			Remark
*	A-4542-086-A	AMPLIFIER BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C2	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C3	1-124-902-00	ELECT	0.47uF	20% 50V	
C4	1-124-902-00	ELECT	0.47uF	20% 50V	
C5	1-126-933-11	ELECT	100uF	20% 16V	
C6	1-126-933-11	ELECT	100uF	20% 16V	
C7	1-126-933-11	ELECT	100uF	20% 16V	
C8	1-126-933-11	ELECT	100uF	20% 16V	
C9	1-126-933-11	ELECT	100uF	20% 16V	
C10	1-130-497-00	MYLAR	0.15uF	5% 50V	
C11	1-130-497-00	MYLAR	0.15uF	5% 50V	
C12	1-126-916-11	ELECT	1000uF	20% 6.3V	
C13	1-126-925-11	ELECT	470uF	20% 10V	
C14	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C15	1-126-947-11	ELECT	47uF	20% 35V	
C16	1-124-902-00	ELECT	0.47uF	20% 50V	
C17	1-126-233-11	ELECT	22uF	20% 50V	
C18	1-126-966-11	ELECT	33uF	20% 50V	
C19	1-163-145-00	CERAMIC CHIP	0.0015uF	5% 50V	
C20	1-124-902-00	ELECT	0.47uF	20% 50V	
C21	1-163-145-00	CERAMIC CHIP	0.0015uF	5% 50V	
		< DIODE >			
D1	8-719-023-84	LED HLMP-1801 (POWER)			
D2	8-719-157-11	DIODE RD3.3MBT2			
D3	8-719-974-59	DIODE 1SR139-100			
		< IC >			
IC1	8-759-801-73	IC LA4555			
IC2	8-759-636-90	IC M62403FP-600C			
		< JACK >			
J1	1-507-777-00	JACK, SMALL TYPE (R OUT)			
J2	1-568-907-21	JACK, EXTERNAL POWER (DC IN 6V)			
		< JUMPER RESISTOR >			
JW1	1-216-296-00	METAL CHIP	0	5% 1/8W	
⟩					
JW17	1-216-296-00	METAL CHIP	0	5% 1/8W	
JW18	1-216-295-00	METAL CHIP	0	5% 1/10W	
JW19	1-216-295-00	METAL CHIP	0	5% 1/10W	
		< TRANSISTOR >			
Q1	8-729-926-86	TRANSISTOR 2SB1424-R			
		< RESISTOR >			
R1	1-216-029-00	METAL CHIP	150	5% 1/10W	
R2	1-216-077-00	METAL CHIP	15K	5% 1/10W	
R3	1-216-065-00	METAL CHIP	4.7K	5% 1/10W	
R4	1-216-118-00	METAL GLAZE	750K	5% 1/10W	
R5	1-216-024-00	METAL GLAZE	91	5% 1/10W	
R6	1-216-017-00	METAL CHIP	47	5% 1/10W	
R7	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R8	1-216-041-00	METAL CHIP	470	5% 1/10W	
R9	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R10	1-216-061-00	METAL CHIP	3.3K	5% 1/10W	
R11	1-216-049-00	METAL CHIP	1K	5% 1/10W	
R12	1-216-041-00	METAL CHIP	470	5% 1/10W	
		< VARIABLE RESISTOR >			
RV1	1-238-144-11	RES, VAR, CARBON 5K (VOLUME)			
		< SWITCH >			
S1	1-570-913-11	SWITCH, PUSH (POWER)			
S2	1-570-913-11	SWITCH, PUSH (DES)			

****

Ref.No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
12	1-559-892-11	CORD (WITH PLUG)	
SP1	1-544-620-11	SPEAKER	

****

ACCESSORIES & PACKING MATERIALS

****

1-465-990-11 ADAPTOR, AC (AC-S164) (US)
1-465-991-11 ADAPTOR, AC (AC-S164) (AEP)
1-465-992-11 ADAPTOR, AC (AC-S164) (E, JE)
1-569-008-11 ADAPTER, CONVERSION 2P (E, JE)
1-693-010-11 ADAPTOR, AC (AC-S164) (UK)

2-129-637-01 STOPPER
3-704-027-01 LABEL, COLOR (SILVER) (E)

3-754-811-11 MANUAL, INSTRUCTION (AEP, UK, E, JE)
(ENGLISH, FRENCH, GERMAN, SPANISH
ITALIAN, PORTUGUESE, DANISH, FINNISH)
3-754-811-21 MANUAL, INSTRUCTION (US) (ENGLISH)
3-754-811-01 MANUAL, INSTRUCTION (JE) (JAPANESE)

* 4-950-817-01 INDIVIDUAL CARTON
* 4-950-818-01 CUSHION (UPPER)
* 4-950-819-01 CUSHION (LOWER) (US)
* 4-950-819-11 CUSHION (LOWER) (AEP, UK, E, JE)

****

****
HARDWARE LIST
****

#1 7-685-646-79 SCREW +BVTP 3X8 TYPE2 N-S
#2 7-685-648-79 SCREW +BVTP 3X12 TYPE2 N-S

9-957-080-11

Sony Corporation
General Audio Group

English
92D0696-1
Printed in Japan
©1992.4
Published by Customer Relations and Service Group